Valve terminal VTUX

FESTO









- Compact design with low overall height and width
- Manifold sub-bases with different widths for different flow rate with the same valves
- Vacuum generator integrated in the manifold sub-base with pressure sensor and ejector pulse
- Flow rate up to 690 l/min
- Flexibly configurable push-in fittings as a cartridge, easy to exchange in just a few simple steps
- Connection to the remote I/O system CPX-AP-I
- Connection to the remote I/O system CPX-AP-A
- IO-Link® interface
- Internal serial communication as infrastructure for highly integrated technology modules

Flexible

- Modular system offering a range of configuration options
- Manifold sub-bases for 4 valves or an individual valve, can be combined as required
- System can be extended as needed with individual manifold sub-bases and modular tie rods
- Up to 64 valve positions
- Can be converted and extended at a later date
- Air supply can be extended via additional pressure zones using supply modules
- Can be assembled using individually ordered components
- Wide range of electrical connection types for multi-pin: Sub-D, ribbon cable or springloaded terminal





Reliable

- High output reserves thanks to large pneumatic cross sections and exhausting with high flow rates
- Resilient thanks to high mechanical rigidity
- Lightweight polymer components
- Fast troubleshooting with LEDs on the valves
- Easy to service with replaceable valves and manifold sub-bases
- Manual override either nondetenting, detenting or protected against unauthorised activation (concealed)

Easy to install

- Fast and reliable delivery as a ready-to-install and tested unit or for self-assembly from individual components
- Reduced selection, ordering, installation and commissioning costs
- Solid wall mounting or DIN rail mounting


Ordering data – Product options



Configurable product
This product and all its product
options can be ordered using the
configurator.

The configurator can be found at → www.festo.com/catalogue/...
Enter the part number or the type.

Part no. Type 8000800 VTUX-A-P 8000805 VTUX-A-S 8000810 VTUX-A-P-APA 8000815 VTUX-A-S-APA 8000850 VUVX

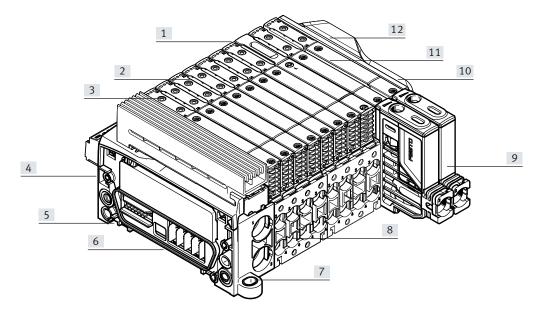

- [1] Valves in width 10 mm and manifold sub-bases in widths of 10 mm and 12 mm
- [2] Reduced downtime: LED signal status indicator
- [3] Safe operation:

 Manual override, nondetenting/detenting or
 concealed
- [4] Internal communication in parallel or series

- [5] Simple electrical connection
 - Multi-pin plug connection
 - Fieldbus interface CPX-AP-A
 - Interface CPX-AP-I
 - IO-Link®
- [6] Safe: operating voltage connection, can be switched off separately for valves
- [7] Quick to mount: Directly using screws or on a DIN rail

- [8] Practical:
 Pre-assembled cartridges can
 - be exchanged in just a few steps
- [9] Vacuum generation integrated directly into the valve terminal
- [10] Adaptable:
 The pilot air supply (internal or external) is selected using a separator in the end plate
- [11] Variable:
 - 32 valve positions/32 solenoid coils with parallel communication and 64 valve positions with serial communication
- [12] Space-saving and modular: low-profile valves and flat plate silencers; creation of pressure zones, multiple additional exhaust air and supply air possible using power supply module

Equipment options

Valve functions

- 5/2-way valve, single solenoid
- 5/2-way valve, double solenoid
- 2x 3/2-way valve, normally open
- 2x 3/2-way valve, normally closed
- 5/3-way valve, mid-position closed

Special features

- Max. 32 valve positions/max. 32 solenoid coils with parallel communication
- Max. 64 valve positions with serial communication
- Any compressed air supply
- Creation of pressure zones possible
- Vacuum generation possible in the manifold sub-base
- Sensor connections/input modules directly on the valve
- Modular, individually extendable tie rods
- Single valves or combinations of four valves
- Freely selectable tubing size at each port


Control variants of the valve terminal VTUX

The VTUX can be integrated in control systems in a variety of ways. There are a range of designs available for actuation via electrical multi-pin connection. Likewise, valve terminals can be connected via IO-Link® using round plugs with a high degree of protection or using terminal connections.

The valve terminals are particularly versatile and high-performing thanks to the perfect integration into the Festo AP Automation Platform. In combination with the remote I/O system CPX AP-A, it is possible to complete valve terminals by configuring and combining them with a range of peripheral modules.

Integration into the remote I/O system CPX-AP-I offers the option of decentralised solutions in particular. It is thus possible to have particularly space-saving solutions close to the pneumatic drives, enabling rapid movements and short cycle times.

A unique feature is the ability to combine the remote I/O system CPX-AP-A and the remote I/O system CPX-AP-I for a combination of centralised and decentralised machine functions. This modularity makes the VTUX perfectly adaptable to any application.

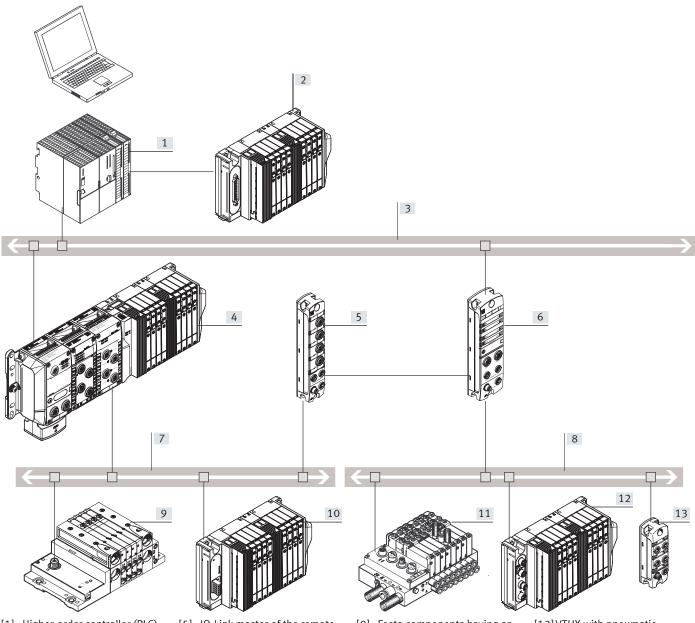

- [1] Higher-order controller (PLC)
- [2] VTUX with multi-pin plug connection
- [3] Fieldbus
- [4] VTUX with remote I/O system CPX-AP-A with fieldbus interface
- [5] IO-Link master of the remote I/O system CPX-AP-I
- [6] Bus node of the remote I/O system CPX-AP-I
- [7] IO-Link®
- [8] AP bus

- [9] Festo components having an I/O interface (e.g. valve terminal MPA-L)
- [10] VTUX with IO-Link® node
- [11] Festo components having an AP bus interface (e.g. valve terminal VTUG)
- [12] VTUX with pneumatic interface for remote I/O system CPX-AP-I
- [13] Input/output module with AP bus

Valve terminal selection

Valve terminal configurator

The appropriate valve terminal VTUX can be selected quickly and easily using the online catalogue. This includes a convenient valve terminal configurator, making it much easier to order the right product.

The valve terminals are assembled according to your order specification and are individually checked. This reduces assembly and installation time to a minimum.

Order a valve terminal VTUX using the order code.


Ordering system for VTUX

- → Internet: vtux
 Ordering system for CPX-AP-I
- → Internet: cpx-ap-i→ Internet: cpx-ap-i

Online at: → www.festo.com 2D/3D CAD data

You can request the CAD data for a valve terminal you have configured. To do so, start the product search as described above. Click on the CAD/EPLAN symbol. On the next page, you can generate a 3D preview or request a data format of your choice via e-mail.

Multi-pin plug connection

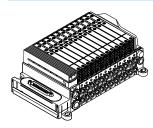

The signals are transmitted from the controller to the valve terminal via a pre-assembled or selfassembled multi-core cable to the multi-pin plug connection. This substantially reduces installation time.


Internal signal flow via parallel communication.

The valve terminal can be equipped with max. 32 solenoid coils. This corresponds to 2 to 32 valves.

Versions:

- Sub-D connection
 - Pre-assembled multi-pin cable
 - Multi-pin cable for selfassembly
 - Connection on top or at the side
- Ribbon cable connection
- Terminal strip connection

Fieldbus interface from the remote I/O system CPX-AP-I

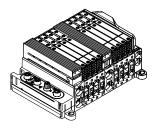

CPX-AP-I is a flexible, decentralised, compact and lightweight remote I/O system with a high protection rating IP65/IP67.

A remote I/O system CPX-AP-I comprises a bus interface and at least one other module. System communication between the modules takes place via connecting cables.

The process data is exchanged cyclically. The following module types are available:


- Bus interface
- Input modules
- Input/output modules
- Interface for valve terminal

Internal signal flow via serial or parallel communication.

Fieldbus protocols that can be combined with VTUX:

- PROFINET
- EtherNet/IP
- EtherCAT®

Fieldbus interface from the remote I/O system CPX-AP-A

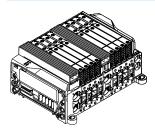

CPX-AP-A is a flexible, central, compact and lightweight remote I/O system with a high degree of protection to IP65/IP67.

A bus node directly mounted on the valve terminal VTLIX manages.


A bus node directly mounted on the valve terminal VTUX manages communication with a higherorder PLC. A compact unit, combining pneumatics, sensors and a bus interface, can be designed using directly linked input and output modules.

Internal signal flow via serial or parallel communication.

Fieldbus protocols:

- PROFINET
- EtherNet/IP
- EtherCAT®

IO-Link®

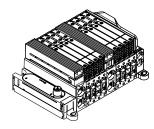

IO-Link® consists of a central master and the IO-Link® devices connected via special connecting cables. This permits a decentralised layout of the devices.

The connection type corresponds to a star topology.

As well as transmitting the communication data, the IO-Link® interfaces also handle the power supply for the connected devices.

The maximum length of a string is 20 m.

Internal signal flow via parallel communication.

Modular pneumatic components

The modular design of the valve terminal VTUX enables outstanding flexibility right from the planning stage and offers maximum ease of service in operation.


The system consists of manifold sub-bases and valves.

The manifold sub-bases form the support system for the valves. They contain the electrical connections, the ducts for supplying compressed air to and exhausting the valve terminal as well as the working ports for the pneumatic drives for each valve.

The manifold sub-bases are connected by a tie rod system. This comprises a tie rods and a screw set. The combination of tie rods and screw set is selected according to the chosen number of individual sub-bases.

A valve terminal can be easily extended by adding individual manifold sub-bases or supply modules. This is done simply by inserting suitable tie rod extenders.


This ensures that the valve terminal can be rapidly and reliably extended.

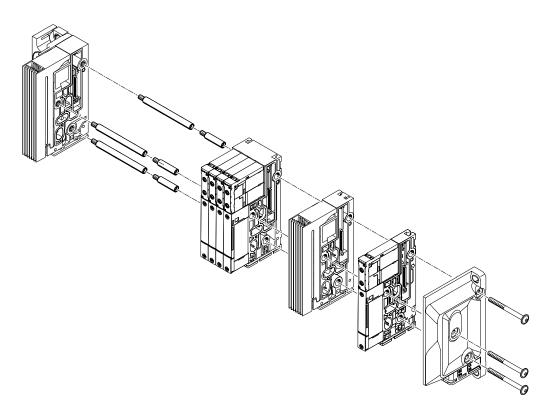

- Note

The tie rod system for the valve terminal VTUX consists of at least two manifold sub-bases or one manifold sub-base and one supply module.

Modular electrical peripherals

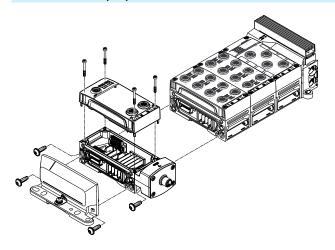

The mechanical connection between the CPX-AP-A modules is created using angled fittings. The remote I/O system CPX-AP-A can therefore be flexibly expanded at any time.

The advantages of polymer (low weight) and metal (sturdy, high EMC compatibility) are perfectly combined by using high-quality polymer materials.


The I/O modules, connection blocks and bus nodes of the remote I/O system CPX-AP-A are mounted on the interlinking blocks using 4 screws and can be swapped or modified in almost any way.

Pneumatics of the valve terminal with parallel communication

The manifold sub-bases are available individually with one valve position or with a grid of four valve positions.

The manifold sub-bases include the electrical links for:

- Single solenoid valves or
- Double solenoid valves
- Double solenoid valve positions occupy two addresses and can be equipped with any valve or a cover plate.
- Single solenoid valve positions occupy a single address and can only be equipped with single solenoid valves or a cover plate.

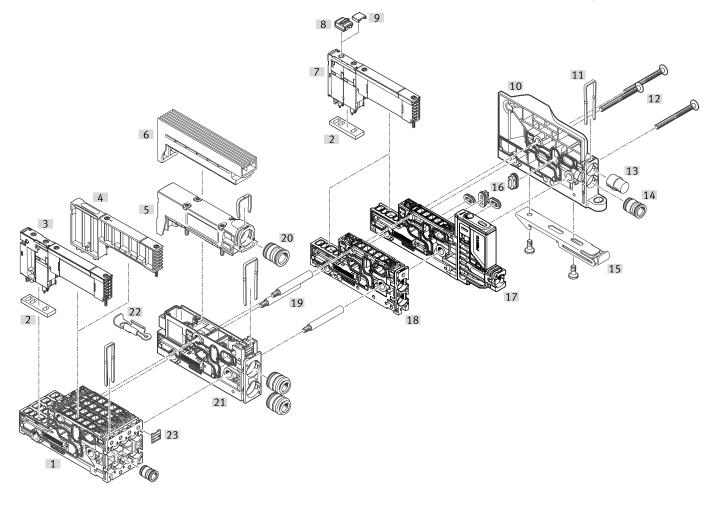


| | Preumatic components of the valve terminal | | | | | |
|-------------|--|--|-----------------|--|--|--|
| Designation | | Brief description | → Page/Internet | | | |
| [1] | Manifold sub-base | Manifold sub-base with four valve positions | 72 | | | |
| [2] | Seal | - | _ | | | |
| [3] | Solenoid valve | Valve size 10 mm | 72 | | | |
| [4] | Vacant position | Cover plate for one valve position | 72 | | | |
| [5] | Plate | Exhaust plate for ducted exhaust air | 73 | | | |
| [6] | Plate | Exhaust plate as flat plate silencer | 73 | | | |
| [7] | Solenoid valve | Valve size 10 mm | 72 | | | |
| [8] | Cover cap for manual override | Conversion from non-detenting to detenting | 76 | | | |
| [9] | Cover cap for manual override | Conversion from non-detenting to concealed | 76 | | | |
| [10] | End plate, right | - End plate with ports 12/14, 82/84 | 74 | | | |
| [11] | Clamping clip for cartridge | - | - | | | |
| [12] | Screw | Tie rod system, connects the manifold sub-bases | 73 | | | |
| [13] | Silencer | With cartridge connection | 76 | | | |
| [14] | Cartridge | For air supply and exhaust ports | 76 | | | |
| [15] | Mounting | Clamp mounting for DIN rail mounting | 73 | | | |
| [16] | Separator | Separator for pressure zone separation in duct 1 and duct 3, 5 | 73 | | | |
| [17] | Manifold sub-base | Manifold sub-base with one valve position for vacuum | 72 | | | |
| [18] | Manifold sub-base | Manifold sub-base with one valve position | 72 | | | |
| [19] | Tie rods | Threaded rod, clamps the manifold sub-bases between the end plates | 73 | | | |
| [20] | Cartridge | For air supply and exhaust ports | 76 | | | |
| [21] | Supply module | For compressed air supply/exhaust air | 73 | | | |
| [22] | Mounting | Mounting bracket for wall mounting | 73 | | | |
| [23] | Inscription labels | For identifying the pressure zone separation | 76 | | | |

Pneumatics of the valve terminal with serial communication

The manifold sub-bases are available in a grid of four.
Additional functions such as input modules are available.

The manifold sub-bases include the electrical links for:

- Single solenoid valves or
- Double solenoid valves
- Double solenoid valve positions occupy two addresses and can be equipped with any valve or a cover plate.
- Single solenoid valve positions occupy a single address and can only be equipped with single solenoid valves or a cover plate.

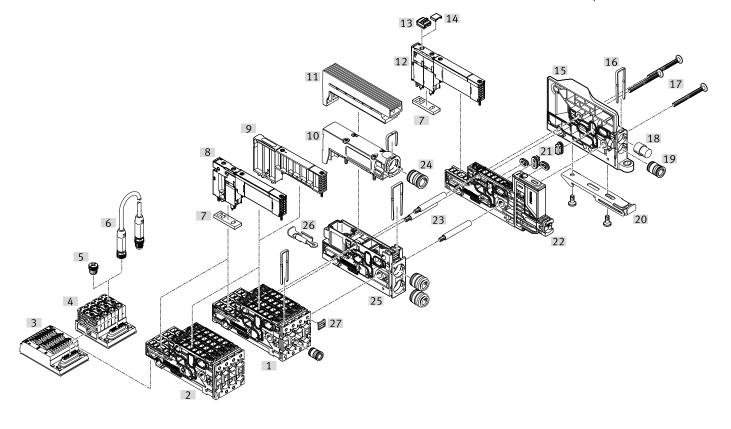

| Pneu | natic components of the valve termin | al | | |
|-----------------------|--------------------------------------|--|-----------------|--|
| Designation | | Brief description | → Page/Internet | |
| [1] Manifold sub-base | | Manifold sub-base with four valve positions | 72 | |
| [2] | Manifold sub-base | Manifold sub-base with four valve positions with connection for input module | 72 | |
| [3] | Input module | Electrical connection – Spring-loaded terminal | 74 | |
| [4] | Input module | Electrical connection, socket M8 | 74 | |
| [5] | Cover cap | For electrical connections M8x1 | 76 | |
| [6] | Connecting cable | - | 75 | |
| [7] | Seal | - | _ | |
| [8] | Solenoid valve | Valve size 10 mm | 72 | |
| [9] | Vacant position | Cover plate for one valve position | 72 | |
| [10] | Plate | Exhaust plate for ducted exhaust air | 73 | |
| [11] | Plate | Exhaust plate as flat plate silencer | 73 | |
| [12] | Solenoid valve | Valve size 10 mm | 72 | |
| [13] | Cover cap for manual override | Conversion from non-detenting to detenting | 76 | |
| [14] | Cover cap for manual override | Conversion from non-detenting to concealed | 76 | |
| [15] | End plate, right | - End plate with ports 12/14, 82/84 | 74 | |
| [16] | Clamping clip for cartridge | - | - | |
| [17] | Screw | Tie rod system, connects the manifold sub-bases | 73 | |
| [18] | Silencer | With cartridge connection | 76 | |
| [19] | Cartridge | For air supply and exhaust ports | 76 | |
| [20] | Mounting | Clamp mounting for DIN rail mounting | 73 | |
| [21] | Separator | Separator for pressure zone separation in duct 1 and duct 3, 5 | 73 | |
| [22] | Manifold sub-base | Manifold sub-base with one valve position for vacuum | 72 | |
| [23] | Tie rods | Threaded rod, clamps the manifold sub-bases between the end plates | 73 | |
| [24] | Cartridge | For air supply and exhaust ports | 76 | |
| [25] | Supply module | For compressed air supply/exhaust air | 73 | |
| [26] | Mounting | Mounting bracket for wall mounting | 73 | |
| [27] | Inscription labels | For identifying the pressure zone separation | 76 | |


Valve terminal with multi-pin plug connection:

Order code:

• VTUX-A-P-M... for pneumatics with parallel communication

Valve terminals VTUX with multipin plug connection can be expanded by up to 32 solenoid coils/valve positions. The multi-pin plug connection can be ordered as a Sub-D connection (25- or 44-pin) or as a terminal strip (34-pin) or as a ribbon cable connection (26-pin). The Sub-D multi-pin plug connection (25- and 44-pin) is available with degree of protection IP40 and IP65; the terminal strip and ribbon cable connection with IP40.

Pre-assembled cables of different lengths with degree of protection IP40 or IP65/67 are available as accessories for the Sub-D multipin plug connection (25- and 44-pin).

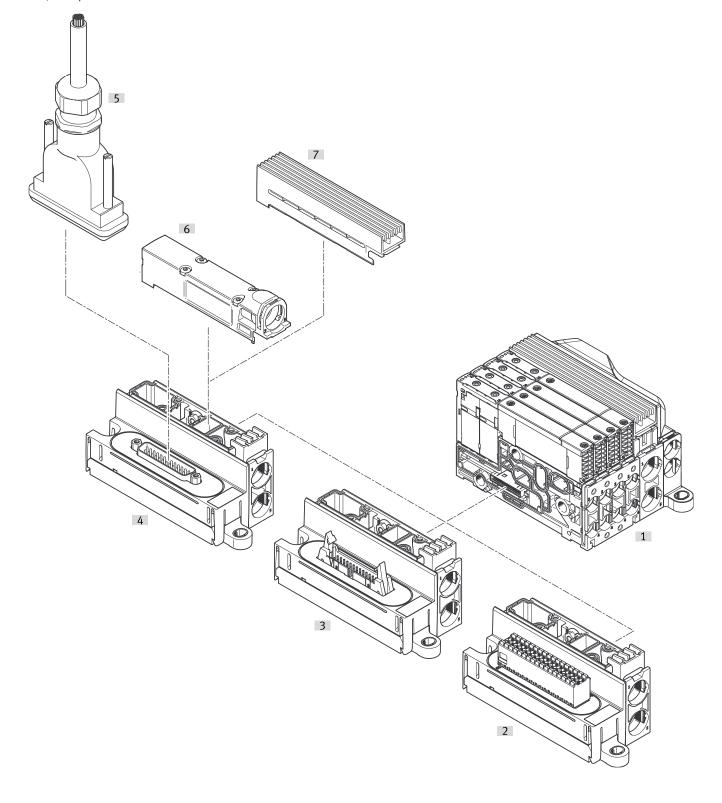

| Designation | | Brief description | → Page/Internet |
|-------------|---------------------------|---|-----------------|
| [1] | Valve terminal VTUX | Pneumatic part | 8 |
| [2] | Multi-pin plug connection | Terminal strip | 74 |
| [3] | Multi-pin plug connection | For ribbon cable, 40-pin, IP40 | 74 |
| [4] | Multi-pin plug connection | Sub-D, 25-pin | 74 |
| | Multi-pin plug connection | Sub-D, 25-pin, | 74 |
| [5] | Connecting cable | Socket 25-pin, Sub-D, open cable end 25-pin | 75 |
| [6] | Plate | Exhaust plate for ducted exhaust air | 73 |
| [7] | Plate | Exhaust plate as flat plate silencer | 73 |

Valve terminal with fieldbus interface, remote I/O system CPX-AP-A

Order code:

- VTUX-A-P-APA-... for pneumatics with parallel communication
- VTUX-A-S-APA-... for pneumatics with serial communication
- CPX-AP-A-... for the electrical peripherals

Valve terminals with CPX-AP-A connection can be expanded with up to 32 solenoid coils/valve positions with parallel communication and with up to 64 valve positions with serial communication.


In combination with single-solenoid valves, up to 32 valve positions (parallel communication) or 64 valve positions (serial communication) can be fitted.

When used exclusively with valves having two solenoid coils (double-solenoid valves, 5/3-way valves, 2x 3/2-way valves), the maximum number of valve positions reduces to 16 with parallel communication.

Each valve position can be equipped with any valve or a cover plate. The rules for CPX-AP-A apply to the equipment that can be used with the electrical peripherals CPX-AP-A.

In general:

- Digital inputs/outputs
- Parameterisation of inputs and outputs
- Integrated, convenient diagnostics
- Preventive maintenance concepts

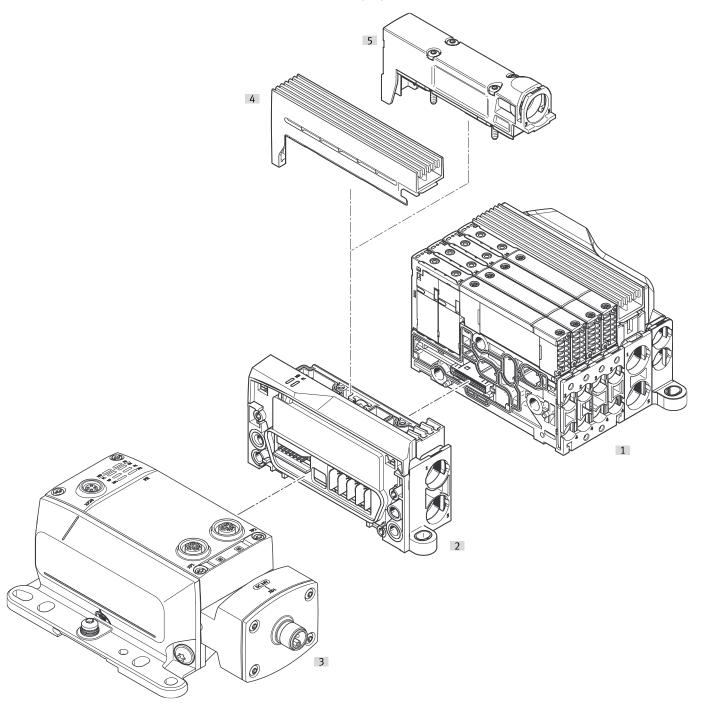

| Desig | nation | Brief description | → Page/Internet |
|-------|----------------------------|--|-----------------|
| [1] | Valve terminal VTUX | Pneumatic part | 8 |
| [2] | Left end plate | Pneumatic interface for remote I/O system CPX-AP-A | 74 |
| [3] | Remote I/O system CPX-AP-A | Electrical part of the remote I/O system CPX-AP-A | срх-ар-а |
| [4] | Plate | Exhaust plate as flat plate silencer | 73 |
| [5] | Plate | Exhaust plate for ducted exhaust air | 73 |

Valve terminal with interface to the remote I/O system CPX-AP-I

Order code:


- VTUX-A-P-API... Pneumatics with parallel communication
- VTUX-A-S-API-... for pneumatics with serial communication
- CPX-AP-I components are to be ordered individually

Valve terminals with CPX-AP-I connection can be expanded with up to 32 solenoid coils/valve positions with parallel communication and with up to 64 valve positions with serial communication.

In combination with single-solenoid valves, up to 32 valve positions (parallel communication) or 64 valve positions (serial communication) can be fitted.

When used exclusively with valves having two solenoid coils (double-solenoid valves, 5/3-way valves, 2x 3/2-way valves), the maximum number of valve positions reduces to 16 with parallel communication.

Each valve position can be equipped with any valve or a cover plate.

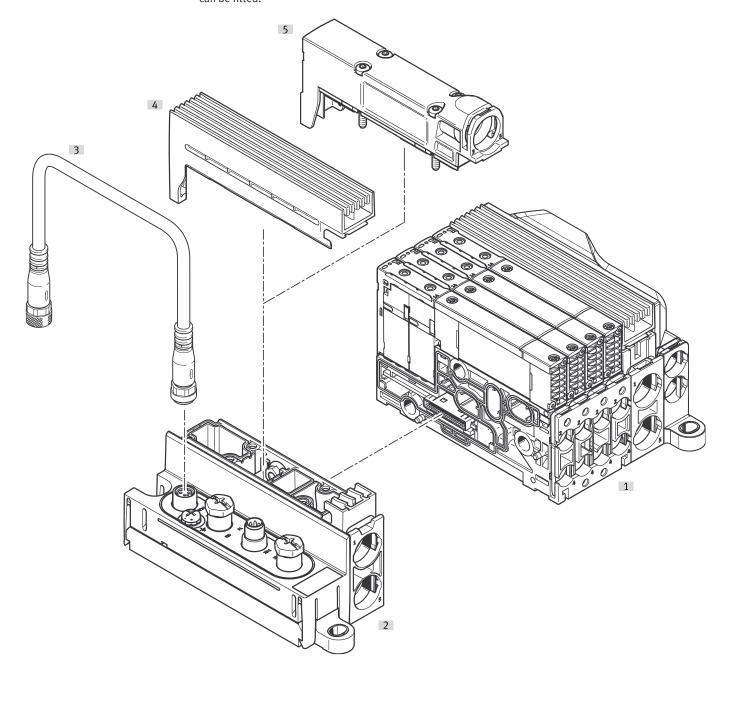

| Designation | | Brief description | → Page/Internet |
|-------------|---------------------|--|-----------------|
| [1] | Valve terminal VTUX | ve terminal VTUX Pneumatic part | |
| [2] | Left end plate | End plate with interface to the remote I/O system CPX-AP-I and with interface for power supply | 74 |
| [3] | Connecting cable | Between two CPX-AP-I modules | cpx-ap-i |
| [4] | Plate | Exhaust plate as flat plate silencer | 73 |
| [5] | Plate | Exhaust plate for ducted exhaust air | 73 |

Valve terminal with IO-Link® interface (and bus node)

Order code:


- VTUX-A-P-IO... for pneumatics with parallel communication
- CPX-AP-A-... for the bus node

Valve terminals with IO-Link[®] interface can be expanded by up to 32 solenoid coils/valve positions.

Up to 32 valve positions can be equipped with single solenoid valves.


The maximum number of valve positions is reduced to 16 if only valves with two solenoid coils are used (double solenoid valves, 5/3-way valves, 2x 3/2-way valves).

Each valve position can be equipped with any valve or a cover plate.

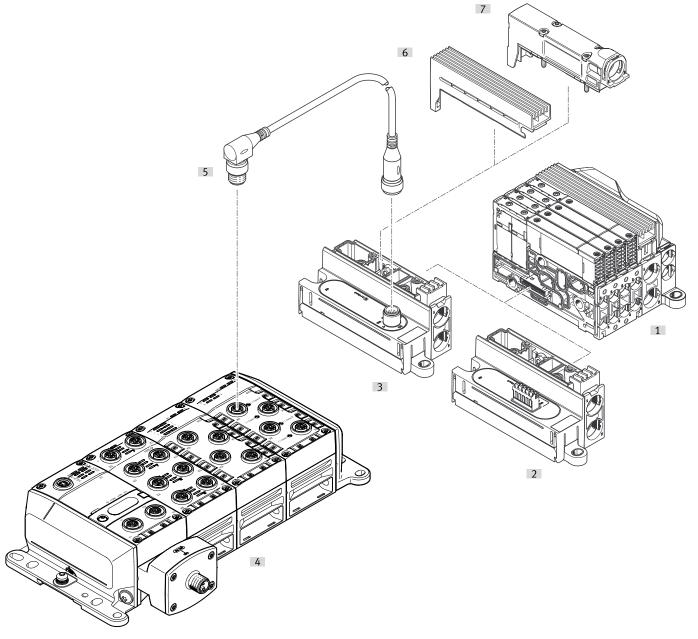

| Design | nation | Brief description | → Page/Internet |
|--------|----------------------------|---|-----------------|
| [1] | Valve terminal VTUX | Pneumatic part | 8 |
| [2] | Left end plate | End plate with IO-Link® interface, push-in electrical connection | 74 |
| [3] | Left end plate | End plate with IO-Link® interface, M12 electrical connection | 74 |
| [4] | Remote I/O system CPX-AP-A | With bus nodes, input/output modules and IO-Link master for connecting devices with IO-Link | срх-ар-а |
| | | interface | |
| [5] | Connecting cable | Between two IO-Link® interfaces | nebu |
| [6] | Plate | Exhaust plate as flat plate silencer | 73 |
| [7] | Plate | Exhaust plate for ducted exhaust air | 73 |

Sub-base valve

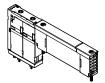

VTUX offers a comprehensive range of valve functions. The spool valves VTUX of width 10 mm offer a particularly high flow rate. They are used on manifold subbases of width 10 mm and 12 mm with a tubing connection up to 8 mm.

Valves of size 10 mm are a particularly effective option for compact valve terminals that also enable applications with outstanding flow rate performance when using 8 mm tubing connections.

This eliminates having to select and decide between different valve sizes and reduces the complexity for planned applications. Mounting valves on manifold subbases offers a range of advantages. The valves are secured using two screws and can be easily replaced.

The 5/2-way and 3/2-way valves are designed to have a negative overlap. This thus enables the working ports to be exhausted in the de-energised state.
Pilot air (duct 12/14) is supplied via the manifold sub-bases, allowing it to be interrupted and exhausted.

All valves have pneumatic pilot control for optimising performance.

Irrespective of the valve function, there are sub-base valves with one solenoid coil (single solenoid) or with two solenoid coils (double solenoid or two single solenoid valves in one housing).

Design

Replacing valves

The valves are attached to the sub-base using two screws.
The tubing remains on the manifold sub-base, which prevents mix-ups during servicing.

which means that they can be easily replaced. The sturdy mechanical structure of the subbase ensures efficient, durable sealing.

Extension

Cover plates for reserve positions can be replaced by valves at a later date.

The dimensions, mounting points as well as the existing pneumatic installation out do not change.



Note

A filter must be installed upstream of valves operated in vacuum mode. This prevents any foreign matter in the intake air getting into the valve (e.g. when operating a suction cup).

| 5/2-way valve Circuit symbol | Code | Assigned addresses | Description |
|-------------------------------------|---------------------------|--------------------|---|
| 14 4 2 12/14 82/84 1 3 | Position function 1-32: A | 1 | Single solenoid Mechanical spring return Reversible Operating pressure -0.09 +0.7 MPa |
| 14 4 2 1 12/14 82/84 1 3 | Position function 1-32: M | 1 | Single solenoid Pneumatic spring return Operating pressure +0.2 +0.7 MPa |
| 14 4 2 12 12 12 12/14 82/84 1 3 | Position function 1-32: J | 2 | Double solenoid Limited reversibility Operating pressure –0.09 +0.7 MPa |

20

Key features – Pneumatic components

| 2x 3/2-way valve Circuit symbol | Code | Assigned addresses | Description |
|--|----------------------------|--------------------|--|
| 14 12 12 12/14 15 82/84 | Position function 1-32: NS | 2 | Single solenoid Normally open Mechanical spring return Reversible Operating pressure 0 0.7 MPa |
| 14 12 12 12 12/14 82/84 1 5 3 | Position function 1-32: K | 2 | Single solenoid Normally closed Mechanical spring return Reversible Operating pressure 0 0.7 MPa |
| 12/14 1 5 82/84 3 | Position function 1-32: KC | 2 | Single solenoid Normally closed Pneumatic spring return Operating pressure 0.15 0.7 MPa |
| 12/14 12 12/14 15 3 | Position function 1-32: KV | 2 | Single solenoid Normally closed Pneumatic spring return For manifold sub-base for vacuum |


| 5/3-way valve Circuit symbol | Code | Assigned addresses | Description |
|---------------------------------------|---------------------------|--------------------|---|
| 14 M 4 2 M 12 12/14 5 1 3 82/84 | Position function 1-32: G | 2 | Mid-position closed Mechanical spring return Reversible Operating pressure -0.09 +0.7 MPa |



The valve functions of an exhausted and pressurised 5/3-way valve can be realised using the 3/2-way valves "normally closed" and "normally open", respectively, with mechanical spring return.

The negative overlap makes it possible to exhaust the working ports in the de-energised state.


Cover plate

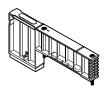

Cover plate (code L) without valve function, for reserving valve positions on a valve terminal.

Valves and cover plates are attached to the manifold sub-base using two screws.

Compressed air supply and exhaust

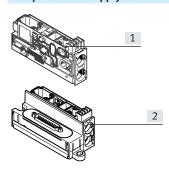

- [1] Supply module
- [2] Left-hand end plate

The valve terminal VTUX can be supplied with compressed air at one or more points via the left end plate and/or via supply modules. The generously sized pneumatic system ensure that all components will offer good performance, even with large-scale extensions.

Exhausting (ducts 3 and 5) takes place either via silencers or ports for ducted exhaust air, via the supply modules or the left end plate.

There are two variants for exhausting:

- Exhaust air 3/5 via flat plate silencer
- Exhaust air 3/5 ducted

Ducts 3 and 5 are separate in the terminal and are only joined together in the supply module/ left end plate. The pilot exhaust air (duct 82/84) is completely separate from ducts 3 and 5.

Pilot air supply



The valve terminal VTUX is supplied with pilot air only via the right end plate.

The type of pilot air supply can be selected using a separator in duct 1 of the end plate:

- Internal (from duct 1) or
- External (from duct 12/14)

The actual control pressure required depends on the valves used on the terminal.

Internal pilot air supply can be selected if the supply pressure of the terminal is correspondingly high.

In this case, the pilot air supply is branched by an internal connection from duct 1 in the right end plate. The operating pressure in the right pressure zone must be at least equal to the highest control pressure required for the entire valve terminal.


Port 12/14 on the right end plate is sealed using a blanking plug.



Note

If a gradual pressure build-up in the system using a soft-start valve is chosen, an external pilot air supply should be connected so that the pilot pressure applied during switch-on is already very high.


| Compressed air supply and pilot air supply | | | | | | | | |
|--|--|--|--|--|--|--|--|--|
| Illustration | Code | Information | | | | | | |
| Right end plate, with supply ports | | | | | | | | |
| 3 1 82/84 12/14 5 | Pilot air supply, via right end plate: – | Internal pilot air supply Pilot air is branched internally from port 1 in the right end plate Port 12/14 in the right end plate is sealed using a blanking plug Pilot exhaust air 82/84 via right end plate For operating pressure in the range 0.25 0.7 MPa | | | | | | |
| 3 1 82/84 12/14 5 | Pilot air supply, via right end plate: Z | External pilot air supply Pilot air supply (0.25 0.7 MPa) is connected at port 12/14 on the right end plate Port 1 in the right end plate is sealed using a separator Pilot exhaust air 82/84 via right end plate For operating pressure in the range –0.09 +0.7 MPa (suitable for vacuum) | | | | | | |
| Supply module, flat plate silencer | | | | | | | | |
| 3 82/84 1 12/14 5 1 12/14 | Connection position type 1-64: U Position function 1-64: US | Exhaust air 3/5 via flat plate silencer Pilot exhaust air 82/84 via right end plate For operating pressure in the range –0.09 +0.7 MPa (suitable for vacuum) | | | | | | |
| Supply module, ducted exhaust air | | | | | | | | |
| 3 3 82/84 82/84 1 12/14 5 5 | Connection position type 1-64: U Position function 1-64: UD | Exhaust air 3/5 via supply module Pilot exhaust air 82/84 via right end plate For operating pressure in the range –0.09 +0.7 MPa (suitable for vacuum) | | | | | | |
| ↓ ¹ / ₂ 1 | | | | | | | | |

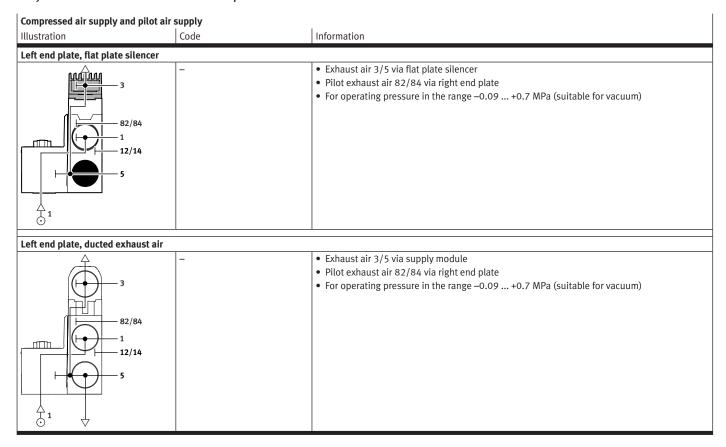

| Supply module | | | | |
|---------------|-------------------------------------|---------------|--------------------------------------|---|
| | Code | Туре | Designation | Information |
| | Position function 1-64: UD | VABF-XA-12-M2 | Exhaust plate for ducted exhaust air | Additional power supply modules can be used fo larger terminals or to create pressure zones. Supply modules can be configured at any point upstream or downstream from the manifold subbases or also next to one another. Supply modules contain the following ports: |
| | Position function 1-64: US | VABF-XA-12-M1 | Flat plate silencer | Compressed air supply (duct 1) Exhaust air (duct 3/5) Depending on your order, the exhaust ducts are either ducted or exhausted via the flat plate silencer. |
| | Connection position type 1-64: U | VABX-A-P-BU | Supply module without cartridge | The flat plate silencer is fixed on the manifold subbase with a latching lug and can be removed without the need for tools. |

| Supply and exhaust ports | | | | | | | |
|--|---|-------|---------------------------|------------------------|---------------------|--|--|
| | Code Connection Push-in fitting/cartridge | | | | | | |
| Right end plate with supply ports 12/14, 82/84 | | | | | | | |
| | 12 | 12/14 | Pilot air supply | Cartridge | Cartridge, straight | | |
| | | 82/84 | Pilot exhaust air | Cartridge | | | |
| Supply module | | | | | | | |
| | Connection position type 1-64: U | 1 | Working air/vacuum supply | Cartridge | Cartridge, straight | | |
| | | 3/5 | Exhaust air | Flat plate silencer | - | | |
| | | | | Cartridge | Cartridge, straight | | |
| | | | | | | | |

Creating pressure zones and separating exhaust air

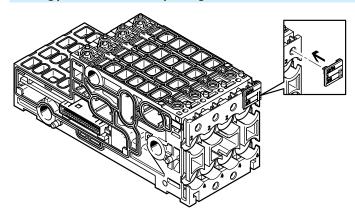

VTUX offers a number of options for creating pressure zones if different working pressures are required.


A pressure zone is created by separating the internal supply duct between any two manifold sub-bases. Every pressure zone must have its own compressed air supply.

Compressed air can be supplied and exhausted via the left end plate and/or the supply modules.

The position of the supply modules and the pressure zone separation can be freely chosen with the valve terminal VTUX.

The separators for pressure zone separation are integrated into the terminal at the factory as specified in your order.

Their position is marked using corresponding inscription labels. Duct separation takes place between two manifold sub-bases.

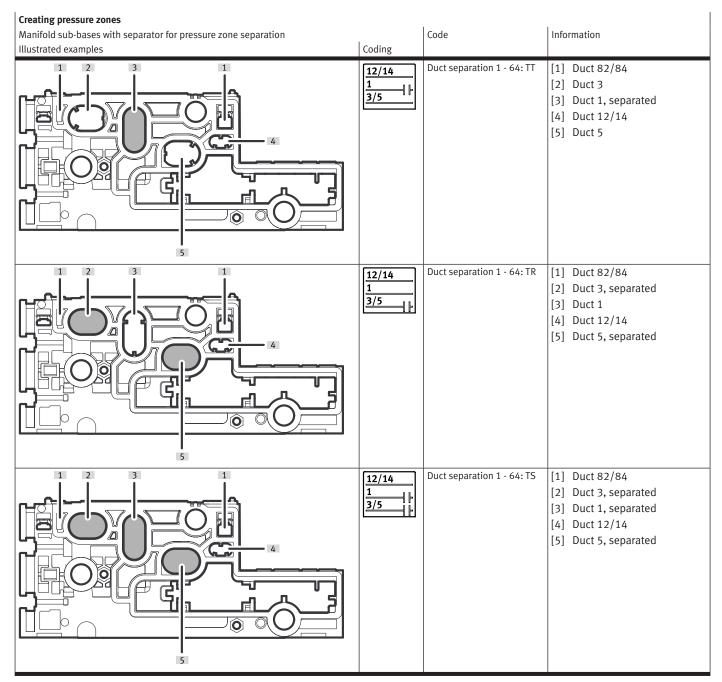


Examples: compressed air supply and pilot air supply

Internal pilot air supply

The diagram on the right shows an example of the configuration and connection of the air supply with internal pilot air supply. The exhaust air (duct 3/5) is exhausted via supply modules. The pilot exhaust air (duct 82/84) is discharged via the right end plate.

Special separators are used to create pressure zones.

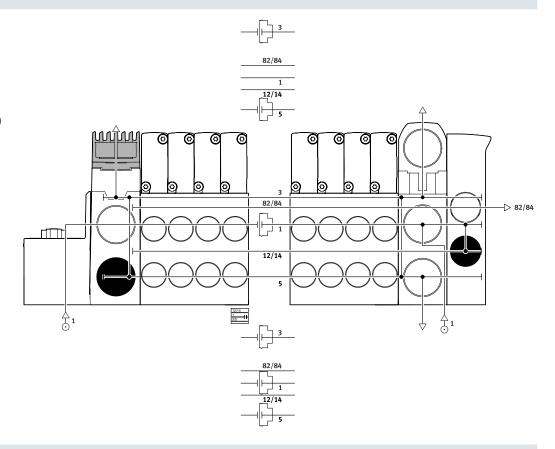


External pilot air supply


The diagram on the right shows an example of the configuration and connection of the compressed air supply with external pilot air supply. Port 12/14 on the right end plate is equipped with a fitting for this.

The exhaust air (duct 3/5) is exhausted via supply modules. The pilot exhaust air (duct 82/84) is discharged via the right end plate.

Special separators are used to create pressure zones.

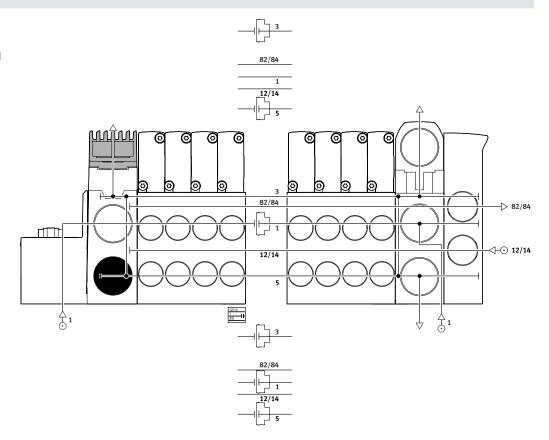

Manifold sub-base

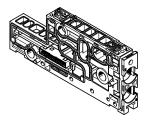

VTUX is based on a modular system which consists of manifold sub-bases and valves. The manifold sub-bases are joined together using tie rods and thus form the support system for the valves.

They contain the ducts for supplying compressed air to and exhausting from the valve terminal as well as the working ports for the pneumatic drives for each valve.

The tie rod used to join the manifold sub-bases together consists of a threaded rod and screw.

The manifold sub-bases are available in variants for one or for four valves.

The threaded rod/screw combination is selected according to the number and width of the individual manifold sub-bases.

To add further manifold subbases, simply loosen the tie rod and adapt using extenders. There are no restrictions on how extensions. A tie rod could be constructed almost entirely using

The electrical connections for the valve terminal are also integrated into the manifold sub-bases.

| Manifold sub-base variants | | | |
|----------------------------|------|--|---|
| | Code | Туре | Information |
| | - | VABX-A-P-BV-AH-F VABX-A-P-BV-AH-A VABX-A-P-BV-BH-G VABX-A-P-BV-BH-B | One valve position Without cartridge Width 10.55 mm One valve position Without cartridge Width 12.55 mm |
| | - | VABX-A-P-BV-AH-RVFFFF VABX-A-P-BV-AH-RVAAAA VABX-A-S-BV-AH-RVAAAA VABX-A-P-BV-BH-RVGGGG VABX-A-P-BV-BH-RVBBBB VABX-A-S-BV-BH-RVBBBB | Four valve positions Without cartridge Width 42.05 mm Four valve positions Without cartridge Width 50.05 mm |
| | - | VABX-A-S-BV-AH-RVOXJAAAA VABX-A-S-BV-BH-RVOXJBBBB | Four valve positions Space for input module Without cartridge Width 42.05 mm Four valve positions Space for input module Without cartridge Width 50.05 mm |
| | VB | VABX-A-P-VE-VB010H VABX-A-S-VE-VB010H | One valve position for 2x 3/2-way valve, normally closed (can only be ordered via configurator) With integrated vacuum generator Without cartridge Width 12.55 mm |

Key features - Mounting

Valve terminal mounting

Sturdy terminal mounting via:

- Four through-holes for wall mounting
- · Additional mounting brackets


· DIN rail mounting



Note

For valve terminals with manifold sub-bases for vacuum, the mounting position must be selected so that the integrated silencer is protected against the ingress of water and any water that has penetrated can drain away again.

Wall mounting

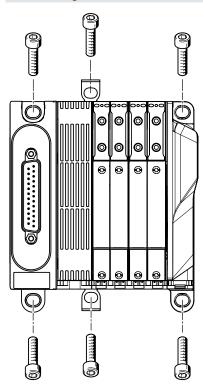


The valve terminal VTUX is screwed onto the mounting surface using four M4 or M6 screws. The mounting holes are on the multi-pin plug connection and on the right end plate.

Optional mounting brackets are also available.

· 🖟 - Note

For wall mounting, in addition to the mounting holes in the end plates, mounting brackets for wall mounting should be fitted every 20 cm.

DIN rail mounting

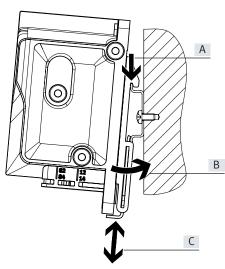

The valve terminal VTUX is attached to the DIN rail (see arrow A).

The valve terminal VTUX is then swivelled onto the DIN rail (see arrow B).

As a third step, the valve terminal VTUX is fitted on the DIN rail by moving the slide on the DIN rail mounting (see arrow C).

The clamp fastening for DIN rail mounting enables the valve terminal to be mounted on DIN rails in accordance with EN 60715.




Note

The clamping kit locks the valve terminal in a horizontal mounting position.

Key features – Mounting

Tie rods

Configuration

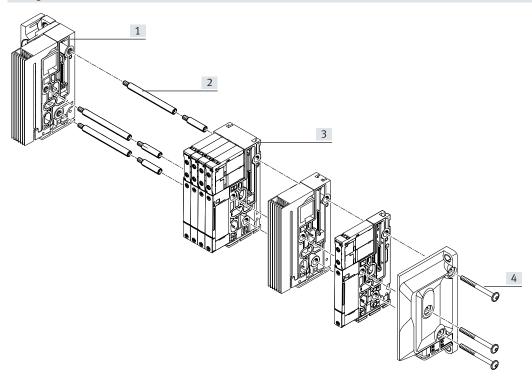

- [1] Left end plate
- [2] Tie rod sections
- [3] Manifold sub-bases
- [4] Tie rod screws

Operating mode

The tie rod on the VTUX is made up of two parts:

- · Threaded rods
- Screw

This enables valve terminals of any length to be created. It takes just four steps to assemble the tie rod and the valve terminal:

- Screw the threaded rods into the left end plate
- Push the sub-bases and supply modules onto the threaded rods
- Push on the right end plate and secure using the screws

The tie rod enables the valve terminal to be extended at a later date. This is done by loosening the tie rod screws and disassembling the relevant components. The additional subbase or the additional supply module is inserted at the required location. The previously disassembled components are then re-assembled.

To compensate for the change in length, the tie rod must be extended by the increase in length. To do this, threaded rods of a suitable length are screwed in place.

To determine which components are required, the online spare parts catalogue includes information on how to use the spare parts and a conversion guide.

Tie rod – Components and design

Tie rod (threaded rod)



The threaded rod is used to create a cost-optimised fixed-grid tie rod. The combination of a threaded rod and screw offers the optimum compensation of tolerances (by compressing the seals between the manifold sub-bases).

The valve terminal can be extended almost infinitely at any time using additional threaded rod sections.

The threaded rod sections are inserted between the existing threaded rod and are available in different lengths, in each case matched to the manifold subbases and supply modules.

Screw



The entire valve terminal is clamped via the tie rod using the screw.

Tolerances that occur, for example when the seals are compressed between the manifold sub-bases during assembly, are compensated by the interaction of the screw and the threaded rod.

Ensure that no more than 65 seals, i.e. 64 manifold sub-bases and supply modules, are combined in one valve terminal.

Key features – Mounting

| Ordering data – Tie rods | | | | | | | | | | | | | | |
|-------------------------------|----|--------|----------|---|---|----------|---|---|----------|---|----------|----|------|----------|
| Reference length | | | Part no. | | | Part no. | | | Part no. | | Part no. | | | Part no. |
| [mm] | | | | | | | | | | | | | | |
| L = sum of the widths of the | T | e rods | | | | | | | | | | S. | rew | |
| manifold sub-bases and supply | '' | e ious | | | | | | | | | | 30 | .iew | |
| modules | | | | | | | | | | | | | | |
| 21.00 23.00 | = | | _ | + | | _ | + | | _ | + | _ | + | 1 | 8191748 |
| 25.00 29.60 | 1 | 1 | 8191756 | 1 | | _ | | | _ | 1 | _ | | 1 | 8191747 |
| 31.50 38.80 | 1 | 1 | 8191757 | i | | _ | | | _ | 1 | _ | i | 1 | 8191747 |
| 40.00 63.30 | 1 | 1 | 8191758 | i | | - | | | - | 1 | - | İ | 1 | 8191748 |
| 63.40 86.20 | 1 | 1 | 8191761 | 1 | | - | | | - | 1 | - | İ | 1 | 8191748 |
| 86.30 109.10 | 1 | 1 | 8191762 | 1 | | - | | | - | 1 | - | | 1 | 8191748 |
| 109.20 131.80 | 1 | 1 | 8191763 | 1 | | - | | | - | 1 | - | | 1 | 8191748 |
| 131.90 154.30 | 1 | 1 | 8191764 | İ | | - | | | - | 1 | _ | | 1 | 8191748 |
| 154.40 173.70 | 1 | 1 | 8191765 | İ | | - | | | - | 1 | _ | İ | 1 | 8191748 |
| 173.80 193.20 | 1 | 1 | 8191766 | | | - | | | - | 1 | - | İ | 1 | 8191748 |
| 193.30 212.70 | 1 | 1 | 8191767 | | | - | | | - | 1 | - | İ | 1 | 8191748 |
| 212.80 231.20 | | 1 | 8191767 | 1 | 1 | 8191756 | | | - | 1 | - | 1 | 1 | 8191748 |
| 231.30 249.90 | 1 | 1 | 8191767 | 1 | 1 | 8191758 | | | - | 1 | - | 1 | 1 | 8191748 |
| 250.00 252.60 | | 1 | 8191766 | İ | 1 | 8191761 | | | - | 1 | - | İ | 1 | 8191748 |
| 252.70 255.60 | 7 | 1 | 8191765 | 1 | 1 | 8191762 | | | - | | - | | 1 | 8191748 |
| 255.70 272.40 | 1 | 1 | 8191767 | | 1 | 8191761 | | | - | 1 | - | | 1 | 8191748 |
| 272.50 275.10 | | 1 | 8191766 | 1 | 1 | 8191762 | | | - | | - | | 1 | 8191748 |
| 275.20 278.10 | | 1 | 8191765 | | 1 | 8191763 | | | - | | - | | 1 | 8191748 |
| 278.20 294.60 | | 1 | 8191767 | | 1 | 8191762 | | | - | | - | | 1 | 8191748 |
| 294.70 297.60 | | 1 | 8191766 | | 1 | 8191763 | | | - | | - | | 1 | 8191748 |
| 297.70 300.60 | | 1 | 8191765 | | 1 | 8191764 | | | _ | | - | | 1 | 8191748 |
| 300.70 317.10 | | 1 | 8191767 | | 1 | 8191763 | | | _ | | - | | 1 | 8191748 |
| 317.20 320.10 | | 1 | 8191766 | | 1 | 8191764 | | | _ | | - | | 1 | 8191748 |
| 320.20 331.70 | | 1 | 8191767 | | 1 | 8191762 | | 1 | 8191758 | | - | | 1 | 8191748 |
| 331.80 339.50 | ╛ | 1 | 8191767 | | 1 | 8191764 | | | - | | - | | 1 | 8191748 |
| 339.60 354.20 | ╛ | 1 | 8191767 | | 1 | 8191763 | | 1 | 8191758 | | - | | 1 | 8191748 |
| 354.30 359.00 | _ | 1 | 8191767 | | 1 | 8191765 | | | - | | - | | 1 | 8191748 |
| 359.10 368.00 | ╛ | 1 | 8191767 | | 1 | 8191764 | | 1 | 8191757 | | - | | 1 | 8191748 |
| 368.10 378.50 | 4 | 1 | 8191767 | | 1 | 8191766 | | | - | | - | | 1 | 8191748 |
| 378.60 387.70 | _ | 1 | 8191767 | | 1 | 8191765 | | 1 | 8191757 | | - | | 1 | 8191748 |
| 387.80 398.20 | 4 | 2 | 8191767 | | | - | | | - | | - | | 1 | 8191748 |
| 398.30 407.20 | 4 | 1 | 8191767 | | 1 | 8191766 | | 1 | 8191757 | | - | | 1 | 8191748 |
| 407.30 416.80 | 4 | 2 | 8191767 | | | - | | 1 | 8191756 | | - | | 1 | 8191748 |
| 416.90 426.70 | 4 | 2 | 8191767 | | 1 | 8191757 | | | - | | - | | 1 | 8191748 |
| 426.80 435.10 | 4 | 2 | 8191767 | | 1 | 8191758 | _ | | - | | - | | 1 | 8191748 |
| 435.20 438.10 | 4 | 1 | 8191767 | | 1 | 8191766 | | 1 | 8191761 | | - | | 1 | 8191748 |
| 438.20 440.90 | 4 | 1 | 8191767 | | 1 | 8191765 | | 1 | 8191762 | | - | | 1 | 8191748 |
| 441.00 443.90 | 4 | 1 | 8191767 | | 1 | 8191764 | | 1 | 8191763 | | - | | 1 | 8191748 |
| 444.00 446.90 | 4 | 2 | 8191766 | | 2 | 8191764 | | | - | | - | | 1 | 8191748 |
| 447.00 457.60 | - | 2 | 8191767 | - | 1 | 8191761 | | | - | - | - | | 1 | 8191748 |
| 457.70 460.60 | - | 1 | 8191767 | - | 1 | 8191766 | | 1 | 8191762 | | - | | 1 | 8191748 |
| 460.70 463.40 | 4 | 1 | 8191767 | - | 1 | 8191765 | | 1 | 8191763 | - | - | | 1 | 8191748 |
| 463.50 466.40 | - | 1 | 8191767 | - | 2 | 8191764 | | | - | - | - | | 1 | 8191748 |
| 466.50 472.30 | - | 2 | 8191767 | - | 2 | 8191758 | | | - | - | - | | 1 | 8191748 |
| 472.40 480.10 | - | 2 | 8191767 | - | 1 | 8191762 | | 1 | - | - | - | - | 1 | 8191748 |
| 480.20 482.90 | + | 1 | 8191767 | 1 | 1 | 8191766 | | 1 | 8191763 | - | - | | 1 | 8191748 |
| 483.00 485.80 | | 1 | 8191767 | L | 1 | 8191765 | | 1 | 8191764 | | - | | 1 | 8191748 |

Key features – Mounting

| Ordering data – Tie rods | | | | | | | | | | | | | | |
|-------------------------------|--------|----------|----------|----------|---------|---|----------|---------|---|---|---------|----------|-----|---------|
| Reference length | | Part no. | Part no. | Part no. | | | Part no. | | | | | Part no. | | |
| [mm] | | | | | | | | | | | | | | |
| L = sum of the widths of the | Tie re | ods | | | | | | | | | | Sc | rew | |
| manifold sub-bases and supply | | | | | | | | | | | | | | |
| modules | | | | | | | | | | | | | | |
| 485.90 494.50 | = 2 | | 8191767 | + 1 | 8191761 | + | 1 | 8191758 | + | | - | + | 1 | 8191748 |
| 494.60 502.60 | 2 | | 8191767 | 1 | 8191763 | | | - | | | - | | 1 | 8191748 |
| 502.70 505.30 | 1 | | 8191767 | 1 | 8191766 | | 1 | 8191764 | | | - | | 1 | 8191748 |
| 505.40 508.60 | 2 | | 8191767 | 1 | 8191762 | | 1 | 8191757 | | | - | | 1 | 8191748 |
| 508.70 517.00 | 2 | | 8191767 | 1 | 8191762 | | 1 | 8191758 | | | - | | 1 | 8191748 |
| 517.10 524.90 | 2 | | 8191767 | 1 | 8191764 | | | - | | | - | | 1 | 8191748 |
| 525.00 531.10 | 2 | | 8191767 | 1 | 8191763 | | 1 | 8191757 | | | - | | 1 | 8191748 |
| 531.20 539.50 | 2 | | 8191767 | 1 | 8191763 | | 1 | 8191758 | | | - | | 1 | 8191748 |
| 539.60 544.50 | 2 | | 8191767 | 1 | 8191765 | | | - | | | - | | 1 | 8191748 |
| 544.60 553.50 | 2 | | 8191767 | 1 | 8191764 | | 1 | 8191757 | | | - | | 1 | 8191748 |
| 553.60 562.00 | 2 | | 8191767 | 1 | 8191764 | | 1 | 8191758 | | | - | | 1 | 8191748 |
| 562.10 564.00 | 2 | | 8191767 | 1 | 8191766 | | | - | | | - | | 1 | 8191748 |
| 564.10 565.00 | 1 | | 8191767 | 1 | 8191766 | | 1 | 8191764 | | 1 | 8191761 | | 1 | 8191748 |
| 565.10 573.00 | 2 | | 8191767 | 1 | 8191765 | | 1 | 8191757 | | | - | | 1 | 8191748 |
| 573.10 579.50 | 2 | | 8191767 | 1 | 8191766 | | 1 | 8191755 | | | - | | 1 | 8191748 |
| 580.60 583.50 | 3 | | 8191767 | | - | | | - | | | - | | 1 | 8191748 |
| 583.60 584.50 | 2 | | 8191767 | 1 | 8191764 | | 1 | 8191761 | | | - | | 1 | 8191748 |
| 584.60 587.50 | 1 | | 8191767 | 1 | 8191766 | 1 | 1 | 8191764 | | 1 | 8191762 | | 1 | 8191748 |
| 587.60 592.50 | 2 | | 8191767 | 1 | 8191766 | | 1 | 8191757 | | | - | | 1 | 8191748 |
| 592.60 598.90 | 3 | | 8191767 | 1 | 8191755 | | | - | | | - | | 1 | 8191748 |
| 599.00 602.00 | 3 | | 8191767 | 1 | 8191756 | 1 | | - | | | - | | 1 | 8191748 |
| 602.10 603.90 | 2 | | 8191767 | 1 | 8191765 | | 1 | 8191761 | | | - | | 1 | 8191748 |
| 604.00 606.90 | 2 | | 8191767 | 1 | 8191764 | | 1 | 8191762 | | | - | | 1 | 8191748 |
| 607.00 612.00 | 3 | | 8191767 | 1 | 8191757 | | | - | ĺ | | - | | 1 | 8191748 |
| 612.10 612.70 | 1 | | 8191767 | 1 | 8191765 | | 2 | 8191764 | | | - | | 1 | 8191748 |
| 612.80 618.60 | 2 | | 8191767 | 1 | 8191765 | | 2 | 8191758 | | | - | Ī | 1 | 8191748 |
| 618.70 620.40 | 3 | | 8191767 | 1 | 8191758 | | | - | | | - | | 1 | 8191748 |
| 620.50 623.40 | 2 | | 8191767 | 1 | 8191766 | | 1 | 8191761 | İ | | - | ĺ | 1 | 8191748 |
| 623.50 626.40 | 2 | | 8191767 | 1 | 8191765 | | 1 | 8191762 | | | - | 1 | 1 | 8191748 |
| 626.50 629.40 | 2 | | 8191767 | 1 | 8191764 | | 1 | 8191763 | | | - | | 1 | 8191748 |
| 629.50 632.20 | 1 | | 8191767 | 1 | 8191766 | 1 | 2 | 8191764 | 1 | | - | ĺ | 1 | 8191748 |
| 632.30 638.10 | 2 | | 8191767 | 1 | 8191766 | | 2 | 8191758 | | | - | | 1 | 8191748 |
| 638.20 642.90 | 3 | | 8191767 | 1 | 8191761 | 1 | | - | | | - | ĺ | 1 | 8191748 |
| 643.00 645.90 | 2 | | 8191767 | 1 | 8191766 | 1 | 1 | 8191762 | 1 | | - | | 1 | 8191748 |
| 646.00 648.90 | 2 | | 8191767 | 1 | 8191765 | 1 | 1 | 8191763 | ĺ | | - | 1 | 1 | 8191748 |
| 649.00 651.60 | 2 | | 8191767 | 2 | 8191764 | 1 | | - | 1 | | - | 1 | 1 | 8191748 |
| 651.70 651.90 | 2 | | 8191767 | 1 | 8191766 | 1 | 1 | 8191761 | | 1 | 8191757 | 1 | 1 | 8191748 |
| 652.00 655.10 | 2 | | 8191767 | 1 | 8191765 | | 1 | 8191762 | ĺ | 1 | 8191757 | 1 | 1 | 8191748 |
| 655.20 657.60 | 3 | | 8191767 | 2 | 8191758 | 1 | | - | ĺ | | - | 1 | 1 | 8191748 |
| 657.70 661.40 | 3 | | 8191767 | 1 | 8191761 | 1 | 1 | 8191756 | ĺ | | - | 1 | 1 | 8191748 |
| 661.50 665.40 | 3 | | 8191767 | 1 | 8191762 | 1 | | - | ĺ | | - | ĺ | 1 | 8191748 |
| 665.50 668.40 | 2 | | 8191767 | 1 | 8191766 | 1 | 1 | 8191763 | ĺ | | - | 1 | 1 | 8191748 |
| 668.50 671.40 | 2 | | 8191767 | 1 | 8191765 | 1 | 1 | 8191764 | ĺ | | - | 1 | 1 | 8191748 |
| 671.50 671.60 | 3 | | 8191767 | 1 | 8191761 | 1 | 1 | 8191757 | | | - | ĺ | 1 | 8191748 |
| 671.70 671.90 | 2 | | 8191767 | 1 | 8191766 | 1 | 1 | 8191762 | | 1 | 8191757 | 1 | 1 | 8191748 |

Key features – Display and operation

Display and operation

Signal status indication

Every solenoid coil is allocated an LED that indicates its signal status.

- Indicator 12 shows the signal status of the coil for duct 2
- Indicator 14 shows the signal status of the coil for duct 4

The valve terminal with serial communication also has an LED for extended diagnostic information.

Manual override


The manual override (MO) enables the valve to be switched when not electrically activated or energised.

The valve is switched by pushing the manual override.

Alternatives:

- A cover cap (code HR or as an accessory) can be used to operate the manual override in detenting mode.
- A cover cap (code HV or as an accessory) can prevent the manual override from being accidentally activated.

Pneumatic connection and control elements

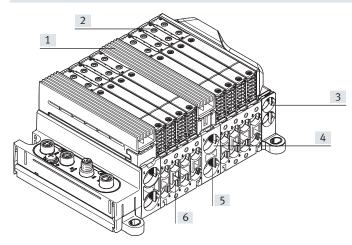

- [1] Flat plate silencer, duct 3/5
- [2] Manual override (for each pilot solenoid, nondetenting or non-detenting/ detenting)
- [3] Ports 12/14 for external pilot air supply and 82/84 for pilot exhaust air in the right end plate
- [4] Supply port, duct 1
- [5] Ducted exhaust air, duct 3/5
- [6] Working ports, ducts 2 and 4, for each valve position




A manually actuated valve (using the manual override) cannot be reset electrically. Conversely, an electrically actuated valve cannot be reset using the manual override.

Key features – Display and operation

Manual override

Manual override with automatic return (non-detenting)

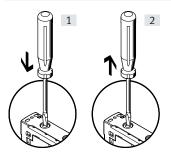

- [1] Press in the plunger of the manual override with a pointed object or screwdriver. The pilot valve switches and actuates the main valve.
- [2] Remove the pointed object or screwdriver.

 The spring force pushes the plunger of the manual override back.

 The pilot valve returns to the normal position as does the single solenoid main valve (this is not the case with a double solenoid valve).

Cover cap for manual override, mounting



Clip the covering onto the pilot valve.

Manual override with cover cap, detenting without accessories, actuation



Moving the slide on the cover cap in the direction of the arrow results in:

- The slide locks into the end position
- The pilot valve switches and actuates the main valve



Moving the slide on the cover cap in the direction of the arrow results in:

- The slide locks into the end position
- The spring force pushes the plunger of the manual override back.
- The pilot valve returns to the normal position as does the single solenoid main valve (this is not the case with a double solenoid valve).

Key features - Electrical components

Internal communication

Parallel communication

Parallel communication is the classic type of multi-pin. Each valve coil is assigned a signalling line within the valve terminal. When controlled via IO-Link® or the remote I/O system CPX-AP-A, the bus signal is split internally into individual channels for the valve coils.

When operated using the remote I/O system CPX-AP-A or CPX-AP-I, the VTUX valve terminal is displayed as a single module (32 addresses).

Advantages:

- Robust and easy-tounderstand control
- Troubleshooting and diagnostics with simple tools directly on the valve terminal

Limitations:

- Number of controllable valve coils is limited
- No diagnostic functions directly on the valve

Serial communication

Serial communication significantly expands the internal communication. This is the infrastructure for highly integrated technology modules and enables bidirectional exchange of data and information between the valve and the PLC.

Significantly more valve coils can be controlled and extensive diagnostic functions are possible. For operation on the remote I/O system CPX-AP-A or CPX-AP-I, each manifold sub-base is displayed as a single module (with a customised number of addresses).

Advantages:

- The number of controllable valve coils is not limited by the communication bandwidth
- Diagnostic functions and, if necessary, sensors directly on the valve
- Troubleshooting and diagnostics also possible remotely via the controller


Limitations:

- Manifold sub-bases for four valves available only
- No multi-pin plug connection available
- No IO-Link[®] connection available

| | Feature | Parallel communication | Serial communication | | |
|----------------------------|--|------------------------|----------------------|--|--|
| Connection to the higher-l | evel control system | | | | |
| | Electrical multi-pin plug connection | • | _ | | |
| | Direct connection to the remote I/O system CPX-AP-A | • | • | | |
| | Connection to the remote I/O system CPX-AP-I | • | • | | |
| | Connection to IO-Link® | • | - | | |
| nternal structure | | | | | |
| | Manifold sub-bases with one valve position | - | _ | | |
| | Manifold sub-bases with four valve positions | • | • | | |
| | Pressure zone separation | • | • | | |
| | Max. no. of valve positions | 32 | 64 | | |
| Special functions | | <u>'</u> | | | |
| | Manifold sub-base with vacuum generator | • | • | | |
| | Manifold sub-base with input modules (2 inputs per valve position) | - | • | | |

Key features – Electrical components

Electrical connection - Left end plate

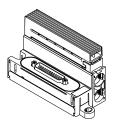

The electrical connection from the valves to a higher-order controller is in the left end plate of the VTUX.

Switching between the various connection options is easy: simply swap the left end plate. The pneumatic connections remain unaffected.

The valves are switched by positive or negative logic (PNP or NPN). Mixed operation is not permitted.

Guidelines on addressing for valves/solenoid coils

The addresses are numbered from left to right in ascending order.
The following applies for individual valve positions: address x for coil 14 and address x+1 for coil 12.

Every manifold sub-base occupies a specific number of addresses/pins:

- Manifold sub-base for a single-solenoid valve: 1
- Manifold sub-base for a double-solenoid valve: 2
- Manifold sub-base for four single solenoid valves: 4
- Manifold sub-base for four double solenoid valves: 8



Note

If a single solenoid valve is mounted on a double solenoid valve position, the second address (for coil 12) is also occupied and cannot be used.

Key features – Electrical components

| Variants of the left end plate | | | | | | |
|-----------------------------------|--------------------------------|----------------------|--------------------|--------------------------|----------------------|--|
| | Code | Туре | Communication type | Max. number of addresses | Degree of protection | Information |
| Electrical multi-pin plug connect | ion | | | | | |
| | Electrical connection: MS1 | VABX-A-P-EL-E12-MS1 | Parallel | 24 | IP40 | Electrical connection: Sub-D, 25-pin |
| | Electrical connection: MS1T | VABX-A-P-EL-E12-MS1T | Parallel | 24 | IP40 | Electrical connection: Sub-D, 25-pin |
| | Electrical connection: MS3 | VABX-A-P-EL-E12-MS3 | Parallel | 32 | IP40 | Electrical connection: Sub-D, 44-pin |
| | Electrical connection: MS6 | VABX-A-P-EL-E12-MS6 | Parallel | 24 | IP65 | Electrical connection: Sub-D, 25-pin |
| | Electrical connection: MF8 | VABX-A-P-EL-E12-MS8 | Parallel | 32 | IP65 | Electrical connection: Sub-D, 44-pin |
| | Electrical connection: MF1 | VABX-A-P-EL-E12-MF1 | Parallel | 24 | IP40 | Electrical connection: ribbon cable, 26-pin |
| | Electrical connection: MC | VABX-A-P-EL-E12-MC | Parallel | 32 | IP40 | Electrical connection: terminal strip, 34-pin |
| Fieldbus interface / remote I/O s | system CPX-AP-A | | | | | |
| | Electrical connection: | VABX-A-P-EL-E12-APA | Parallel | 32 | IP65 | Electrical connection: CPX- |
| | APA | VABX-A-S-EL-E12-APA | Serial | - | IP65 | AP-A interface |
| Interface to the remote I/O syste | em CPX-AP-I | | | | | |
| | Electrical connection: | VABX-A-P-EL-E12-API | Parallel | 32 | IP65 | Electrical connection |
| | API | VABX-A-S-EL-E12-API | Serial | _ | IP65 | 2x socket, M8x1, D-coded, 4-pin, AP-COM M8x1, A-coded, 4-pin for power supply |
| IO-Link® interface | | | | | | |
| | Electrical connection: | VABX-A-P-EL-E12-IOL | Parallel | 32 | IP40 | Electrical connection: Push-in, IO-Link [®] |
| | Electrical connection: IOS | VABX-A-P-EL-E12-IOS | Parallel | 32 | IP65 | Electrical connection: M12, IO-Link [®] |

Key features - Electrical components

Fieldbus interface / remote I/O system CPX-AP-A

The pneumatic interface (left end plate) serves as an adapter between the two current feeds. All functions and features of the remote I/O system CPX-AP-A are valid in combination with the CPX-AP-I interface.

This means that:

- The valves are supplied via the system supply of the remote I/O system CPX-AP-A
- The valves can optionally be actuated or switched off separately from the outputs

- Note

More information can be found at:

→ Internet: cpx-ap-a

remote I/O system CPX-AP-I

All functions and features of the CPX-AP-I are valid in combination with the remote I/O system CPX-AP-I:

- Power supply via the connection in the left end plate of the VTUX
- Power supply together with other modules or individually for the valve terminal
- Valves actuated via the communication cable from the preceding module
- Cable length of up to 50 m between the modules
- Up to 80 individual modules/ valve terminals per bus interface

- Note

More information can be found at:

→ Internet: cpx-ap-i→ Internet: cpx-ap-i

IO-Link®

The IO-Link® interface enables the valve terminal VTUX to be connected to the following systems:

- Remote I/O systems CPX-AP-I and CPX-AP-A from Festo
- Automation system CPX-E from Festo
- CPX terminal
- Control system CECC
- IO-Link master

The maximum distance between the IO-Link master and valve terminal with IO-Link[®] interface is 20 m.

The 5-pin connecting cables transmit the power supply for the valves; the power supply for the internal valve terminal electronics and the control signals are separate from this.



Note

More information can be found at:

→ Internet: cpx-ap-a

Instructions for use

Operating materials

Operate your system with unlubricated compressed air, if possible. Festo valves and cylinders are designed so that, if used as intended, they will not require additional lubrication and will still achieve a long service life. The quality of compressed air downstream of the compressor must correspond to that of unlubricated compressed air. If possible, do not operate the entire system with lubricated compressed air. The lubricators should, where possible, always be installed directly upstream of the actuator requiring them.

Incorrect additional oil and too high an oil content in the compressed air reduce the service life of the valve terminal.

Use Festo special oil OFSW-32 or the alternatives listed in the Festo catalogue (as specified in DIN 51524 HLP32; basic oil viscosity 32 CST at 40°C).

Bio-oils

When using bio-oils (oils synthesised on the basis of synthetic or native esters, e.g. rapeseed oil methyl esters), the residual oil content of max.

0.1 mg/m3 must not be exceeded (see ISO 8573-1 Class 2).

Mineral oils

When using mineral oils (e.g. HLP oils to DIN 51524 Part 1 to 3) or corresponding oils based on poly alpha olefins (PAO), the residual oil content of max 5 mg/m3 must not be exceeded (see ISO 8573-1 Class 4).

A higher residual oil content is not permitted, regardless of the compressor oil, because the permanent lubrication would otherwise be flushed out over a period of time.

Valve terminal VTUX

Datasheet – Valve terminal VTUX

- N - Flow rate up to 690 l/min

- 🚺 - Valve width 10 mm

- **** - Voltage 24 V DC



| General technical data | | | | |
|--|---------|------------------------------------|------------------------------------|--|
| | | Parallel communication | Serial communication | |
| Valve terminal design | | Modular and expandable | Modular and expandable | |
| Actuation type | | Electrical | Electrical | |
| Nominal operating voltage | [V DC] | 24 | 24 | |
| Permissible voltage fluctuations | [%] | ±10 | ±10 | |
| Max. no. of valve positions | | 32 | 64 | |
| Max. no. of pressure zones | | 16 | 16 | |
| Valve size | [mm] | 10 | 10 | |
| Type of control | | Piloted | Piloted | |
| Valve function | | 2x3/2-way, single solenoid, closed | 2x3/2-way, single solenoid, closed | |
| | | 2x3/2-way, single solenoid, open | 2x3/2-way, single solenoid, open | |
| | | 5/2-way, single solenoid | 5/2-way, single solenoid | |
| | | 5/2-way, double solenoid | 5/2-way, double solenoid | |
| | | 5/3-way, closed | 5/3-way, closed | |
| Design | | Piston spool | Piston spool | |
| Sealing principle | | Soft | Soft | |
| Type of mounting sub-base | | Via through-hole | Via through-hole | |
| Type of mounting | | Tie rods | Tie rods | |
| Pilot air supply | | Internal or external | Internal or external | |
| Suitable for vacuum | | Yes | Yes | |
| Exhaust air function | | Can be throttled | Can be throttled | |
| Nominal flow rate standardised according to ISO 8778 | [l/min] | 470 690 | 470 690 | |
| Grid dimension | [mm] | 10.55 12.55 | 10.55 12.55 | |

| Pneumatic connections | | | | | | | |
|-----------------------|---|---|---|---|---|-------|-------|
| Pneumatic connection | 1 | 2 | 3 | 4 | 5 | 12/14 | 82/84 |
| QS-4 | _ | • | - | - | _ | - | |
| QS-6 | _ | • | - | • | _ | • | - |
| QS-8 | • | • | • | • | • | • | |
| QS-10 | • | _ | • | - | • | _ | _ |
| QS-12 | • | _ | • | - | • | _ | _ |
| QS-1/8 | _ | • | - | • | _ | _ | _ |
| QS-5/32 | _ | • | _ | • | _ | _ | _ |
| QS-1/4 | _ | • | _ | • | _ | • | • |
| QS-5/16 | • | • | • | • | • | • | - |
| QS-3/8 | • | _ | • | - | • | _ | _ |
| For 10 mm cartridge | _ | • | - | • | _ | _ | _ |
| For 12 mm cartridge | _ | • | _ | • | _ | • | - |
| For 15 mm cartridge | • | _ | • | _ | • | _ | _ |
| Silencer | _ | _ | • | _ | • | _ | • |
| Blanking plug | _ | | | • | • | • | _ |

Datasheet – Valve terminal VTUX

| Operating and environmental | conditions | | | | |
|--|------------|--|----------------------|--|--|
| | | Parallel communication | Serial communication | | |
| Operating medium | | Compressed air to ISO 8573-1:2010 [7:4:4] → 37 | | | |
| Pilot medium | | Compressed air to ISO 8573-1:2010 [7:4:4] → 37 | | | |
| Operating pressure | [MPa] | -0.1 +0.7 | | | |
| | [bar] | -1 +7 | | | |
| | [psi] | -14.5 +101.5 | | | |
| Operating pressure for valve | [MPa] | 0.15 0.7 | | | |
| terminal with internal pilot air | [bar] | 1.5 7 | | | |
| supply | [psi] | 21.75 101.5 | | | |
| Pilot pressure | [MPa] | 0.15 0.7 | | | |
| | [bar] | 1.5 7 | | | |
| | [psi] | 21.75 101.5 | | | |
| Ambient temperature | [°C] | −5 +50 | | | |
| Storage temperature | [°C] | -20 +70 | | | |
| Nominal operating altitude | [m] | ≤ 2000 above sea level | | | |
| Maximum setup altitude | [m] | 3500 | | | |
| Corrosion resistance class CRC | 1) | 1 | | | |
| CE marking (see declaration of | : | To EU EMC Directive ²) | | | |
| conformity) | | According to EU RoHS Directive ²⁾ | | | |
| UKCA marking (see declaration | of | To UK EMC regulations ²⁾ | | | |
| conformity) | | to UK RoHS regulations ²⁾ | | | |
| KC marking | | KC EMC | | | |
| Certification | | RCM | RCM | | |
| | | c UL us - Listed (OL) | - | | |
| Certificate-issuing authority | | UL E322346 | _ | | |
| Vibration resistant | | Transport application test with severity level 1 to FN 942017-4 and EN 60068-2-6 | | | |
| Shock resistance | | Shock test with severity level 1 to FN 942017-5 and EN 60068-2-27 | | | |
| Continuous shock resistance to DIN/IEC | | Tested to severity level 1 | | | |
| 68, Part 2 - 82 | | | | | |
| Degree of protection | | IP20, IP40, IP65 | | | |

¹⁾ More information www.festo.com/x/topic/crc

²⁾ For information about the area of use, see the EC declaration of conformity at: www.festo.com/catalogue/... d Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

| Materials | | | | |
|------------------------|----------------|--|--|--|
| Manifold sub-base | PA | | | |
| Seals | NBR | | | |
| | HNBR | | | |
| Note on materials | RoHS-compliant | | | |
| LABS (PWIS) conformity | VDMA24364-C1-L | | | |


Valve terminal VTUX

Datasheet - Valves of size 10 mm

- N - Flow rate up to 730 l/min

- 【】- Valve width 10 mm

- **** - Voltage 24 V DC

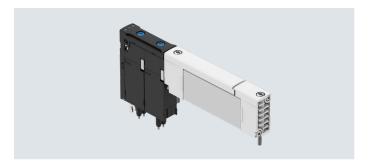

| General technical data | | |
|---|------|--------------------------------|
| Valve size | | 10 mm |
| Design | | Piston spool with sealing ring |
| Actuation type | | Electrical |
| Type of control | | Piloted |
| Duty cycle | [%] | 100 |
| Electrical connection | | Plug-in |
| Pilot air supply | | External |
| Sealing principle | | Soft |
| Exhaust air function | | Can be throttled |
| Manual override | | Non-detenting |
| Signal status indication | | Yes |
| Mounting position | | Any |
| Type of mounting | | On sub-base |
| Max. tightening torque for valve mounting | [Nm] | 0.375 |
| | [mm] | 10.35 |

| Pneumatic connections | | |
|------------------------|-------|----------|
| Pneumatic connection | 1 | Sub-base |
| | 3 | Sub-base |
| | 5 | Sub-base |
| | 12 | Sub-base |
| | 82 | Sub-base |
| | 2 | Sub-base |
| | 4 | Sub-base |
| Pilot air connection | 12 | Sub-base |
| | 12/14 | Sub-base |
| Pilot exhaust air port | 82/84 | Sub-base |

Datasheet – Valves of size 10 mm

| Technical data – Valves | | | | | | | | |
|---|---------|-------------------|------------------|------------------------------|--|---------------------------|------------------|--------------------|
| Code for position function 1-6 | 54 | A | M | J | NS | K | KC, KV | G |
| Valve function | | 5/2-way, single | solenoid | 5/2-way, double solenoid | 2x3/2-way, single solenoid, open | 2x3/2-way, sing closed | gle solenoid, | 5/3-way, closed |
| Reset method | | Mechanical spring | Pneumatic spring | _ | Mechanical spring | Mechanical spring | Pneumatic spring | Mechanical spring |
| Overlap | | Negative overlap |) | | | | | Positive overlap |
| Flow direction | | Reversible | Not reversible | Reversible with restrictions | Reversible | Reversible | Not reversible | Reversible |
| Suitable for vacuum | | Yes | No | Yes | No | No | No | Yes |
| Nominal width | [mm] | 4.2 | 4.2 | 4.2 | 3.6 | 3.8 | 3.8 | 3.5 |
| Switching time on | [ms] | 8 | 10 | _ | 14 | 14 | 12 | 10 |
| Switching time off | [ms] | 32 | 18 | _ | 17 | 17 | 22 | 48 |
| Switching time changeover | [ms] | _ | _ | 9 | _ | _ | _ | _ |
| Nominal flow rate standardised according to ISO 8778 | [l/min] | 730 | 730 | 730 | 555 | 600 | 600 | 510 |
| Nominal flow rate standardised to ISO 8778; exhaust 2→3 | [l/min] | 700 | 700 | 700 | 545 | 650 | 650 | 465 |
| Operating pressure | [MPa] | -0.09 +0.7 | 0.2 0.7 | -0.09 +0.7 | 0.0 0.7 | 0.0 0.7 | 0.15 0.7 | -0.09 +0.7 |
| | [bar] | -0.9 +7 | 2 7 | -0.9 +7 | 0 7 | 0 7 | 1.5 7 | -0.9 +7 |
| Pilot pressure | [MPa] | 0.25 0.7 | 0.2 0.7 | 0.15 0.7 | 0.15 0.7 | 0.15 0.7 | 0.15 0.7 | 0.25 0.7 |
| | [bar] | 2.5 7 | 27 | 1.5 7 | 1.5 7 | 1.5 7 | 1.5 7 | 2.5 7 |
| Product weight | [g] | 43.4 | 43.3 | 51.9 | 52.6 | 52.6 | 52 | 53.2 |

| Operating and environmental conditions | | | | |
|--|--|--|--|--|
| Operating medium | Compressed air to ISO 8573-1:2010 [7:4:4] → 37 | | | |
| Pilot medium | Compressed air to ISO 8573-1:2010 [7:4:4] → 37 | | | |
| Note on the operating/pilot medium | Lubricated operation possible (in which case lubricated operation will always be required) | | | |
| Ambient temperature [°C] | -5 +50 | | | |
| Temperature of medium [°C] | -5 +50 | | | |
| Storage temperature [°C] | -20 +70 | | | |
| Corrosion resistance class CRC ¹⁾ | | | | |
| Vibration resistant | Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6 | | | |
| Shock resistance | Shock test with severity level 1 to FN 942017-5 and EN 60068-2-27 | | | |
| Degree of protection | IP65 | | | |


¹⁾ More information www.festo.com/x/topic/crc

| Materials | |
|------------------------|----------------------------------|
| Housing | Anodised wrought aluminium alloy |
| Spring | High-alloy stainless steel |
| Piston spool | POM |
| Screws | Stainless steel |
| Seals | HNBR |
| Dynamic seals | HNBR |
| Note on materials | RoHS-compliant |
| LABS (PWIS) conformity | VDMA24364 zone III |


Datasheet - Valves of size 10 mm

Pilot pressure p2 as a function of working pressure p1


For 5/2-way valve, single solenoid, mechanical spring return

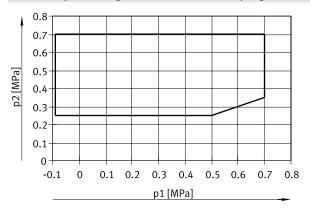


For 5/2-way valve, single solenoid, pneumatic spring return

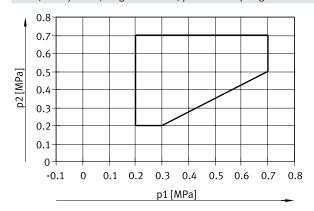


For 5/2-way valve, double solenoid

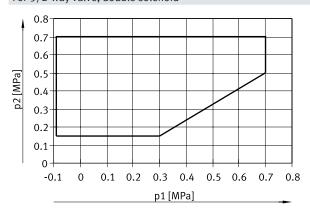


For 2x3/2-way valve, mechanical spring return

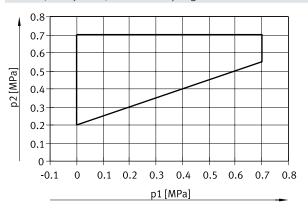

For 2x3/2-way valve, pneumatic spring return

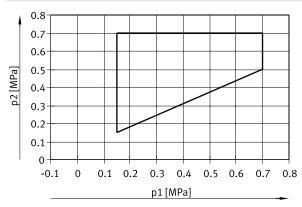

For 5/3-way valve, normally closed

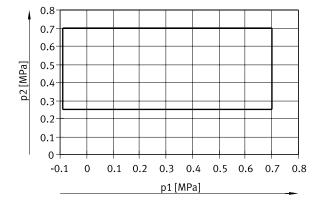

$\label{eq:decomposition} \mbox{Datasheet} - \mbox{Left end plate with IO-Link}^{\mbox{\scriptsize @}}$

Festo-specific, standardised interface for direct connection via a cable to an IO-Link master.

Valve terminals with IO-Link® interface can be expanded by up to 32 solenoid coils/valve positions.

Up to 32 valve positions can be equipped with single solenoid valves.



IO-Link® for valve terminal VTUX

The IO-Link® interface enables the valve terminal VTUX to be connected to an IO-Link® network.

The maximum distance between the IO-Link master and the valve terminal with IO-Link® interface is 20 m.

The 5-pin connecting cables transmit the power supply for the valves; the power supply for the internal valve terminal electronics and the control signals are separate from this.

The built-in LED is used as a status indicator for diagnostics and maintenance.

| General technical data | | |
|--------------------------------|--------------------------------|-------|
| Electrical connection | Push-in | M12 |
| Size | 1 | |
| | 2 | |
| Types of communication | IO-Link® | |
| Protocol | IO-Link [®] | |
| Electrical control | IO-Link [®] | |
| Valve terminal design | Valve sizes can be mixed | |
| Compatible with | Valve terminal VTUX-A-P | |
| Max. number of solenoid coils | 32 | |
| Diagnostics via LED | Connection status | |
| | (Outputs) Power supply load | |
| Connection position | On the side | |
| Cable outlet | Straight | |
| Type of mounting | With through-hole for M5 screw | |
| Type of mounting sub-base | Via through-hole | |
| Max. tightening torque for [Nm | n] 6 | |
| wall mounting | | |
| Dimensions W x L x H [mn | n] 45.6 x 117.4 x 53.9 | |
| Product weight [g] | 124.4 | 127.4 |

Pneumatic connections

| Pneumatic connection | 1 | For 15 mm cartridge |
|----------------------|---|---------------------|
| | 5 | For 15 mm cartridge |

Valve terminal VTUX

$\label{eq:decomposition} \mbox{Datasheet} - \mbox{Left end plate with IO-Link}^{\mbox{\scriptsize @}}$

| Technical data – Electrical component | i | | | |
|---|--|-----|--|--|
| Electrical connection | Push-in | M12 | | |
| Connection cross-section [mm ²] | 0.2 1.5 | - | | |
| Reverse polarity protection | Yes | | | |
| Fuse protection (short circuit) | Internal electronic fuse per channel | | | |
| Electrical isolation of outputs between channel - internal communication | Yes | | | |
| Potential separation between the supp voltages electronics/sensors and load, valves | * | | | |
| Nominal operating voltage DC [V] for electronics/sensors | 24 | | | |
| Nominal operating voltage DC [V] load | 24 | | | |
| Note on the operating voltage | SELV/PELV power supply units required Note voltage drop | | | |
| Permissible voltage [%] fluctuations, electronics/ sensors | ±25 | | | |
| Permissible voltage [%] fluctuations, load | ±10 | | | |
| Intrinsic current consumption [mA] at nominal operating voltage, electronics/sensors | Typically 10 | | | |
| Intrinsic current consumption [mA] at nominal operating voltage, load | Typically 15 | | | |
| Power consumption at [mW] 24 V DC | 240 | | | |
| Max. power supply [A] | 2 x 4 (external fuse required) | | | |
| Pollution degree | 2 | | | |

| Technical data – IO-Link® | |
|--|--------------|
| IO-Link®, protocol version [mm²] | Device V 1.1 |
| IO-Link®, communication mode | COM3. |
| IO-Link®, port class | В |
| IO-Link®, process data width [byte] | 4 |
| OUT | |
| IO-Link [®] , minimum cycle time [μs] | 500 |
| Max. cable length [m] | 20 |

Datasheet – Left end plate with IO-Link®

| Operating and environmental co | onditions | | | |
|--|-----------|--|------|--|
| Electrical connection | | Push-in | M12 | |
| Ambient temperature | [°C] | -5 50 | | |
| Storage temperature | [°C] | -20 70 | | |
| Relative humidity | [%] | 5 95 | | |
| Nominal operating altitude | [m] | ≤ 2000 above sea level | | |
| Maximum setup altitude | [m] | 3500 | | |
| Corrosion resistance class CRC ¹⁾ | | 2 | | |
| CE marking (see declaration of | | To EU EMC Directive | | |
| conformity) ²⁾ | | To EU RoHS Directive | | |
| UKCA marking (see declaration of | of | To UK EMC regulations | | |
| conformity) ²⁾ | | To UK RoHS regulations | | |
| KC marking | | KC EMC | | |
| Certification | | RCM | | |
| Vibration resistant | | Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6 | | |
| Shock resistance | | Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27 | | |
| Degree of protection to EN 6052 | 29 | IP40 | IP65 | |

¹⁾ More information www.festo.com/x/topic/crc

²⁾ For information about the area of use, see the declaration of conformity at: www.festo.com/catalogue/... → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

| Materials | |
|------------------------|----------------------------|
| Sub-base | Reinforced PA |
| Cover | Reinforced PA |
| Seals | NBR |
| Film | Polyester |
| Sleeve | High-alloy stainless steel |
| Clip | High-alloy stainless steel |
| Nut | High-alloy stainless steel |
| Note on materials | RoHS-compliant |
| LABS (PWIS) conformity | VDMA24364-B1/B2-L |

Datasheet – Manifold sub-bases for parallel communication





| General technical data | | | | | |
|--|---------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Туре | | VABX-A-P-BV-AH | VABX-A-P-BV-BH | VABX-A-P-BV-AH-R | VABX-A-P-BV-BH-R |
| Size | | 1 | 2 | 1 | 2 |
| Integrated function | | With electrical interlinking module | With electrical interlinking module | With electrical interlinking module | With electrical interlinking module |
| Compatible with | | Valve terminal VTUX-A-P | Valve terminal VTUX-A-P | Valve terminal VTUX-A-P | Valve terminal VTUX-A-P |
| Maximum number of valve pos | sitions | 1 | 1 | 4 | 4 |
| Flow direction | | Reversible | Reversible | Reversible | Reversible |
| Suitable for vacuum | | Yes | Yes | Yes | Yes |
| Nominal flow rate standardised according to ISO 8778 | [l/min] | 470 | 690 | 470 | 690 |
| Pneumatic connection 2 | | for 10 mm cartridge | For 12 mm cartridge | for 10 mm cartridge | For 12 mm cartridge |
| Pneumatic connection 4 | | for 10 mm cartridge | For 12 mm cartridge | for 10 mm cartridge | For 12 mm cartridge |
| Type of mounting | | Tie rods | Tie rods | Tie rods | Tie rods |
| Type of mounting sub-base | | Via through-hole | Via through-hole | Via through-hole | Via through-hole |
| Grid dimension | [mm] | 10.55 | 12.55 | 10.55 | 12.55 |
| Dimensions W x L x H | [mm] | 10.55 x 104.3 x 43.1 | 12.55 x 104.3 x 43.1 | 42.05 x 104.3 x 43.1 | 50.05 x 104.3 x 43.1 |
| Product weight | [g] | 31.2 | 36.2 | 115.7 | 136.2 |

| Technical data – Electrical components | | |
|--|----------------|--|
| Electrical control | Multi-pin plug | |
| Pollution degree | 2 | |

| Operating and environmental conditions | | | |
|--|--|--|--|
| Ambient temperature [°C] | -5 50 | | |
| Storage temperature [°C] | -20 70 | | |
| Relative humidity [%] | 5 95 | | |
| Corrosion resistance class CRC ¹⁾ | 2 | | |
| CE marking (see declaration of | To EU EMC Directive | | |
| conformity) ²⁾ | To EU RoHS Directive | | |
| KC marking | KC EMC | | |
| Certification | RCM | | |
| Vibration resistant | Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6 | | |
| Shock resistance | Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27 | | |
| Degree of protection to EN 60529 | IP65 | | |

¹⁾ More information www.festo.com/x/topic/crc

²⁾ For information about the area of use, see the declaration of conformity at: www.festo.com/catalogue/... → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

| Materials | | | |
|------------------------|----------------------------|----------------------------|--|
| | For one valve | For four valves | |
| Sub-base | Reinforced PA | Reinforced PA | |
| Seals | NBR | NBR | |
| Retaining bracket | - | POM | |
| Clip | High-alloy stainless steel | High-alloy stainless steel | |
| Nut | High-alloy stainless steel | High-alloy stainless steel | |
| Note on materials | RoHS-compliant | RoHS-compliant | |
| LABS (PWIS) conformity | VDMA24364-B1/B2-L | VDMA24364-B1/B2-L | |

Datasheet – Manifold sub-bases for serial communication





| General technical data | | | | |
|--|---------|-------------------------------------|-------------------------------------|--|
| Туре | | VABX-A-S-BV-AH-RV | VABX-A-S-BV-BH-RV | |
| Size | | 1 | 2 | |
| Integrated function | | With electrical interlinking module | With electrical interlinking module | |
| Compatible with | | Valve terminal VTUX-A-S | Valve terminal VTUX-A-S | |
| Maximum number of valve posit | ions | 4 | 4 | |
| Flow direction | | Reversible | Reversible | |
| Suitable for vacuum | | Yes | Yes | |
| Nominal flow rate standardised according to ISO 8778 | [l/min] | 470 | 690 | |
| Pneumatic connection 2 | | for 10 mm cartridge | For 12 mm cartridge | |
| Pneumatic connection 4 | | for 10 mm cartridge | For 12 mm cartridge | |
| Type of mounting | | Tie rods | Tie rods | |
| Type of mounting sub-base | | Via through-hole | Via through-hole | |
| Grid dimension | [mm] | 10.55 | 12.55 | |
| Dimensions W x L x H | [mm] | 42.05 x 104.3 x 43.1 | 50.05 x 104.3 x 43.1 | |
| Product weight [| [g] | 120.7 | 141.2 | |

| Technical data – Control | | | |
|---|------------------------------|-------------------|--|
| | Without input module | With input module | |
| Electrical control | AP interface | | |
| Communication interface, protocol | AP | | |
| Max. number of inputs | _ | 8 | |
| Max. address volume for [byte] | 1 | 1 | |
| outputs | | | |
| Diagnostics via LED | Diagnostics per channel | | |
| | Diagnostics per module | | |
| Diagnostics via internal communication | Load switch-off | | |
| | Logic supply overvoltage PS | | |
| | Load supply overvoltage PL | | |
| | Logic supply undervoltage PS | | |
| | Load supply undervoltage PL | | |
| Electrical isolation of outputs between | Yes | | |
| channel - internal communication | | | |
| Potential separation between the supply | Yes | | |
| voltages electronics/sensors and load/ | | | |
| valves | | | |

Datasheet – Manifold sub-bases for serial communication

| Technical data – Electrical con | ponents | |
|---|---------|---------------------------------------|
| Nominal operating voltage DC for electronics/sensors | [V] | 24 |
| Nominal operating voltage DC load | [V] | 24 |
| Permissible voltage fluctuations, electronics/ sensors | [%] | ±25 |
| Permissible voltage fluctuations, load | [%] | ±10 |
| Note on the operating voltage | | SELV/PELV power supply units required |
| | | Note voltage drop |
| Power failure buffering | [ms] | 10 |
| Intrinsic current consumption at nominal operating voltage, electronics/sensors | [mA] | Typically 24 |
| Intrinsic current consumption at nominal operating voltage, load | [mA] | Typically 7 |
| Power consumption at 24 V DC | [mW] | 740 |
| Overvoltage category | | II . |
| Fuse protection (short circuit) | | Internal electronic fuse per channel |
| Inductive protective circuit | | Integrated |
| Reverse polarity protection | | Yes |
| Pollution degree | | 2 |

| Operating and environmental conditions | | | | |
|--|-------|--|--------------------------|--|
| | | Without input module | With input module | |
| Ambient temperature | [°C] | −5 50 | | |
| Storage temperature | [°C] | -20 70 | | |
| Relative humidity | [%] | 5 95 | | |
| Max. setup altitude | [m] | - | 3500 | |
| Nominal operating altitude | | < 3000 m above sea level | ≤ 2000 m above sea level | |
| Corrosion resistance class CRC ¹⁾ | | 1 | | |
| CE marking (see declaration of | | To EU EMC Directive | | |
| conformity) ²⁾ | | To EU RoHS Directive | | |
| KC marking | | KC EMC | | |
| Certification | | RCM | | |
| Vibration resistant | | Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6 | | |
| Shock resistance S | | Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27 | | |
| Degree of protection to EN | 60529 | IP65 | IP20, IP65 | |

¹⁾ More information www.festo.com/x/topic/crc

²⁾ For information about the area of use, see the declaration of conformity at: www.festo.com/catalogue/... → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

| Materials | | | |
|------------------------|----------------------------|-------------------|--|
| | Without input module | With input module | |
| Sub-base | Reinforced PA | | |
| Seals | NBR | | |
| Retaining bracket | POM | | |
| Sleeve | High-alloy stainless steel | | |
| Clip | High-alloy stainless steel | | |
| Nut | High-alloy stainless steel | | |
| Note on materials | RoHS-compliant | | |
| LABS (PWIS) conformity | VDMA24364-B1/B2-L | VDMA24364-B2-L | |


Datasheet – Input modules for manifold sub-bases


- Voltage 24 V DC The digital input modules provide 8 digital inputs in accordance with IEC 61131-2, types 1 and 3 for connecting digital sensors.

The input modules have LEDs to indicate the signal status.



Configuration

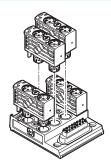

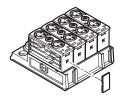

On the input module with electrical connection M8, two M8 connections are mounted as a unit using a screw connection. This makes it easy to disconnect both connections from the module at the same time.

When assembled, the entire installation is particularly spacesaving.

The units also allow inscription labels to be attached.

| General technical data | | | |
|---|---|----------------------------------|--|
| | Electrical connection, spring-loaded terminal | Electrical connection, socket M8 | |
| Max. number of modules | 6 | | |
| Number of inputs | 8 | | |
| Max. number of inputs | 8 | | |
| Diagnostics via internal communication | Short circuit/overload Power OUT PL | | |
| Electrical isolation of inputs between channels | No | | |
| Dimensions W x L x H [mm] | 41.8 x 60.5 x 20.9 41.8 x 49.0 x 27.2 | | |
| Product weight [g] | 32 | 42 | |

| Technical data – Inputs | | | | | |
|---|---|----------------------------------|--|--|--|
| | Electrical connection, spring-loaded terminal | Electrical connection, socket M8 | | | |
| Electrical connection 1, function | Digital input | Digital input | | | |
| Electrical connection | Spring-loaded terminal | M8 | | | |
| Electrical connection 1, connection type | Terminal strip | Socket | | | |
| Electrical connection 1, number of pins/ | 3 | 3 | | | |
| cores | | | | | |
| Electrical connection 1, assigned pins/ | 24 | 24 | | | |
| cores | | | | | |
| Electrical connection 1, type of mounting | Screw-type lock | Screw-type lock | | | |
| Electrical connection 1, [Nm] | 0.7 | 0.7 | | | |
| tightening torque | | | | | |
| Max. tightening torque for plug [Nm] | _ | 0.6 | | | |
| Electrical connection for input, [mm²] | 0.2 1.5 | - | | | |
| conductor cross section | | | | | |
| Electrical connection for output, note on | 0.09-1.5 flex. without wire end sleeve | _ | | | |
| conductor cross section | | | | | |
| Electrical connection for input, AWG | AWG28 AWG16 | - | | | |
| conductor cross section | | | | | |
| Input debounce time [ms] | 3 | 3 | | | |
| Switching level | Signal 1: ≥ 11 V | Signal 1: ≥ 11 V | | | |
| Voltage drop of sensor supply [V] | <1 | <1 | | | |
| Max. cable length | 30 m inputs | 30 m inputs | | | |
| Input characteristics | According to EN 61131-2 | According to EN 61131-2 | | | |

Datasheet – Input modules for manifold sub-bases

| Technical data – Electrical compon | ents | | | |
|---|------------|---|----------------------------------|--|
| | | Electrical connection, spring-loaded terminal | Electrical connection, socket M8 | |
| Nominal operating voltage DC for electronics/sensors | [V] | 24 | | |
| Permissible voltage fluctuations, electronics/sensors | [%] | ±25 | | |
| Permissible voltage fluctuations, load | [%] | ±10 | | |
| Note on the operating voltage | | SELV/PELV power supply units required | | |
| | | Note voltage drop | | |
| Power failure buffering | [ms] | 10 | | |
| Intrinsic current consumption at nominal operating voltage, electronics/sensors | [mA] | Typically 4 | | |
| Max. total current of inputs per module | [A] | 0.2 | | |
| Overvoltage category | | II | | |
| Fuse protection (short circuit) | | Internal electronic fuse per module | | |
| Behaviour after end of overload of t | the sensor | Automatic return (default) | | |
| supply | | | | |
| Pollution degree | | 2 | | |

| Operating and environmental cor | ditions | | | |
|--|---------|--|----------------------------------|--|
| | | Electrical connection, spring-loaded terminal | Electrical connection, socket M8 | |
| Ambient temperature | [°C] | -5 50 | | |
| Storage temperature | [°C] | -20 70 | | |
| Relative humidity | [%] | 5 95 | | |
| Nominal operating altitude | | ≤ 2000 m above sea level | | |
| Corrosion resistance class CRC ¹⁾ 0 1 | | | 1 | |
| CE marking (see declaration of conformity) ²⁾ | | To EU EMC Directive | | |
| | | To EU RoHS Directive | | |
| KC marking | | KC EMC | | |
| Certification | | RCM | | |
| Vibration resistant Transport applic | | Insport application test with severity level 2 to FN 942017-4 and EN 60068-2-6 | | |
| Shock resistance | | Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27 | | |
| Degree of protection IP20 IP65 | | | IP65 | |
| Note on degree of protection – In mounted state | | | In mounted state | |

¹⁾ More information www.festo.com/x/topic/crc

²⁾ For information about the area of use, see the declaration of conformity at: www.festo.com/catalogue/... → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

| Materials | | |
|------------------------|---|----------------------------------|
| | Electrical connection, spring-loaded terminal | Electrical connection, socket M8 |
| Plug housing | PA | PA |
| Film | Polyester | Polyester |
| Seals | - | NBR |
| O-ring | - | NBR |
| Note on materials | RoHS-compliant | RoHS-compliant |
| LABS (PWIS) conformity | VDMA24364-B2-L | VDMA24364-B2-L |


| Pin assignment of sensor connections, electrical connection socket M8 | | | |
|---|--------|---|--|
| Pin | Signal | Designation | |
| 1 | 24 V | Operating voltage 24 V | |
| 3 | 0 V | Operating voltage 0 V | |
| 4 | lx* | Sensor signal | |
| | 1 | Pin Signal 1 24 V 3 0 V | |

^{*} Ix = Input x

Datasheet - Manifold sub-base for vacuum

- 🚺 - Valve width 10 mm

- Maximum vacuum 93 kPa

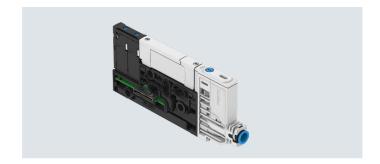

Operating mode

Description

Vacuum generation for a single valve position can be integrated on the VTUX. No further installations are required. The vacuum is generated within the manifold sub-base according to the Venturi principle and is available at port 2.

By using a 2x 3/2-way valve, the ejector pulse function is available at the same time.

With the integrated check valve, vacuum can be held in an energy-saving way.


The manifold sub-base for vacuum comprises:

- Adjusting screw for setting the ejector pulse
- Integrated check valve for energy-saving vacuum maintenance
- Integrated silencer
- The corresponding valve must be ordered separately via the configurator


Additional functions are available for the version with serial links:

- Pressure sensor
- · Air saving function
- Condition monitoring

Manifold sub-base for vacuum with multi-pin electrical control

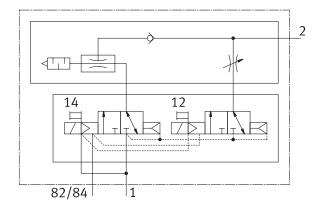

Manifold sub-base for vacuum with AP interface electrical control

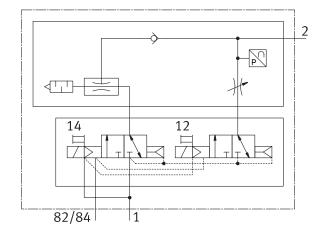

Datasheet - Manifold sub-base for vacuum

| Combination of m | Combination of manifold sub-bases for vacuum and power supply modules | | | | |
|------------------------|---|---|---|--|--|
| Ambient temperature | Power supply modules | Number of manifold sub- bases for vacuum per valve terminal | | | |
| Max. 50 °C | None | 4 | The integrated vacuum generation places high demands on the valve | | |
| | After 4 manifold sub-bases for vacuum | Any | terminal VTUX. Good heat dissipation is therefore required. Avoid mounting the valve | | |
| Max. 40 °C | None | 7 | terminal on highly insulating surfaces (e.g. wood or plastic). | | |
| | After 4 manifold sub-bases for vacuum | Any | termination inginy instituting surfaces (e.g. wood or plastic). | | |

Examples of possible configurations at a maximum ambient temperature of $50\ensuremath{^{\circ}\text{C}}$

4 manifold sub-base without intermediate supply







13 manifold sub-base with intermediate supply





The vacuum connection has no filter function. A filter must therefore be installed upstream if contamination of the intake air is expected. This prevents any foreign matter getting in (e.g. when operating a suction cup).

Datasheet – Manifold sub-base for vacuum

| General technical data | | | |
|-----------------------------------|---|-------------------------------|--|
| Туре | VABX-A-P | VABX-A-S | |
| Electrical control | Multi-pin plug | AP interface | |
| Communication interface, protocol | - | AP-COM | |
| Compatible with | Valve terminal VTUX-A-P | Valve terminal VTUX-A-S | |
| Maximum number of valve positions | 1 | | |
| Max. no. of solenoid coils | 2 | | |
| Integrated function | Ejector pulse, electrical | Ejector pulse, electrical | |
| | Ejector pulse valve, electric | Ejector pulse valve, electric | |
| | Flow restrictor | Flow restrictor | |
| | On/off valve, electric On/off valve, electric | | |
| | Check valve Check valve | | |
| | Open silencer Open silencer | | |
| | With electrical interlinking module With electrical interlinking module | | |
| | _ | Pressure sensor | |
| | _ | Pressure transmitter | |
| | _ | Air-saving function, electric | |
| Mounting position | Any | | |
| Type of mounting | Tie rods | | |
| Dimensions W x L x H [mm] | 12.55 x 150.8 x 68.8 | | |
| Length [mm] | 150.8 | | |
| Grid dimension [mm] | 12.55 | | |
| Valve size [mm] | 10 | | |
| Product weight [g] | 65 68 | | |

Pneumatic connections

| Pneumatic connection 2 | For tubing O.D. 4 mm | |
|------------------------|----------------------|-----------------------|
| | | For tubing O.D. 6 mm |
| | | For tubing O.D. 8 mm |
| | | For tubing O.D. 5/32" |
| | | For tubing O.D. 1/4" |
| | | For tubing O.D. 5/16" |

| Minimum connection sizes | | | | | |
|-----------------------------|------------------|------------|-------------------|-------------|--------------------------------------|
| Туре | VABX-VB07H | VABX-VB07L | VABX-VB010H | VABX-VB010L | |
| Tubing length up to 0.5 m | Tubing O.D. 6 mm | | Tubing O.D. 6 mm | | â |
| | Tubing O.D. 1/4" | | Tubing O.D. 1/4" | | - F Note |
| Tubing length up to 2.0 m | Tubing O.D. 6 mm | | Tubing O.D. 8 mm | | Tubing sizes smaller than |
| | Tubing O.D. 1/4" | | Tubing O.D. 5/16" | | those specified reduce the |
| Recommended connection size | Tubing O.D. 8 mm | | Tubing O.D. 8 mm | | performance of the vacuum generator. |

| Technical data – Valves | | | | |
|--------------------------|------------------------------------|--|--|--|
| Туре | VABX-A-P | VABX-A-S | | |
| Valve function | 2x3/2-way, single solenoid, closed | | | |
| Type of control | Piloted | | | |
| Actuation type | Electrical | Electrical | | |
| Pilot air supply | Internal | Internal | | |
| Sealing principle | Soft | Soft | | |
| Display type | LED | LED | | |
| Signal status indication | Yellow LED, valve control | Yellow LED, valve control Blue LED for valve control | | |
| | | LED changes to green for "Vacuum reached" | | |

Datasheet – Manifold sub-base for vacuum

| Technical data – Electrical components | | | | | |
|---|---------------------------------------|---------------------------------------|--|--|--|
| Туре | VABX-A-P | VABX-A-S | | | |
| Reverse polarity protection | Yes | | | | |
| Inductive protective circuit | Integrated | Integrated | | | |
| Nominal operating voltage DC [V] | 24 | - | | | |
| Nominal operating voltage DC [V] for electronics/sensors | - | 24 | | | |
| Nominal operating voltage DC [V] load | - | 24 | | | |
| Note on the operating voltage | SELV/PELV power supply units required | SELV/PELV power supply units required | | | |
| | Note voltage drop | Note voltage drop | | | |
| Permissible voltage [%] fluctuations | ±10 | - | | | |
| Permissible voltage [%] fluctuations, electronics/ sensors | - | ±10 | | | |
| Permissible voltage [%] fluctuations, load | - | ±10 | | | |
| Intrinsic current consumption [mA at nominal operating voltage | Typically 2 | - | | | |
| Intrinsic current consumption [mA at nominal operating voltage, electronics/sensors | N] – | Typically 27 | | | |
| Intrinsic current consumption [mA at nominal operating voltage, load | A] – | Typically 2.5 | | | |
| Power consumption at [W] 24 V DC | - | 0.65 | | | |
| Power failure buffering [ms | ·] – | 10 | | | |
| Electrical isolation of outputs betwee channel - internal communication | een – | Yes | | | |
| Potential separation between the s voltages electronics/sensors and lc valves | | Yes | | | |
| Diagnostics via internal communica | tion – | Load switch-off | | | |
| | | Electronics/sensors overvoltage | | | |
| | | Electronics/sensors undervoltage | | | |

| Technical data – Vacuum | | | | | | | | |
|---|---------|--------------------|-------------------|-------------|-------------------|--|--|--|
| Туре | | VABX-VB07H | VABX-VB07L | VABX-VB010H | VABX-VB010L | | | |
| Ejector characteristics | | High vacuum | High suction rate | High vacuum | High suction rate | | | |
| Adjusting element | | Slotted head screw | | | | | | |
| Silencer design | | Open | | | | | | |
| Nominal width of Laval nozzle [mm] | | 0.7 | 0.7 | 0.95 | 0.95 | | | |
| Maximum vacuum | [MPa] | 0.093 | _ | 0.093 | _ | | | |
| Max. suction volume flow against atmosphere | [l/min] | 18 | 33.7 | 24 | 45 | | | |
| Pressurisation time at nominal operating pressure | [s] | 0.37 | 0.34 | 0.39 | 0.42 | | | |

| Technical data - Pressure sen | sor | | | | | | |
|-------------------------------|-------|-------------------|--|--|--|--|--|
| Туре | | /ABX-A-S | | | | | |
| Measured variable | | Relative pressure | | | | | |
| Measuring principle | | Piezoresistive | | | | | |
| Pressure measuring range | [MPa] | -0.1 +0.1 | | | | | |
| [bar] | | -1 +1 | | | | | |
| | [psi] | -14.5 +14.5 | | | | | |
| Accuracy in ± % FS | [%] | 3 FS | | | | | |
| Reproducibility, switching | [%] | 1 | | | | | |
| value FS | | | | | | | |

Datasheet – Manifold sub-base for vacuum

| Operating and environmental | conditions | | | | | | | | | | |
|--------------------------------|---------------|--|---------------------------------|---------------------------|-------------|--|--|--|--|--|--|
| Туре | | VABX-VB07H | VABX-VB07L | VABX-VB010H | VABX-VB010L | | | | | | |
| Operating medium | | Compressed air to ISO | 8573-1:2010 [7:4:4] → 37 | | | | | | | | |
| Pilot medium | | Compressed air to ISO 8573-1:2010 [7:4:-] → 37 | | | | | | | | | |
| Note on the operating/pilot m | edium | Ester oil < 0.1mg/m³, according to ISO 8573-1:2010 [-:-:2] | | | | | | | | | |
| | | Lubricated operation not possible | | | | | | | | | |
| Operating pressure | [MPa] | 0.2 0.7 | | | | | | | | | |
| | [bar] | 2 7 | | | | | | | | | |
| | [psi] | 29 101.5 | | | | | | | | | |
| Nominal operating pressure | [MPa] | 0.6 | 0.6 | | | | | | | | |
| | [bar] | 6 | | | | | | | | | |
| | [psi] | 87 | | | | | | | | | |
| Operating pressure for max. | [MPa] | 0.44 | _ | 0.38 | _ | | | | | | |
| vacuum | [bar] | 4.4 | _ | 3.8 | _ | | | | | | |
| | [psi] | 63.8 | _ | 55.1 | _ | | | | | | |
| Operating pressure for max. | [MPa] | 0.3 | 0.6 | 0.4 | 0.6 | | | | | | |
| suction rate | [bar] | 3 | 6 | 4 | 6 | | | | | | |
| | [psi] | 43.5 | 87 | 58 | 87 | | | | | | |
| Pilot pressure | [MPa] | 0.2 0.7 | | | | | | | | | |
| | [bar] | 27 | | | | | | | | | |
| | [psi] | 29 101.5 | | | | | | | | | |
| Ambient temperature | [°C] | −5 +50 | | | | | | | | | |
| Storage temperature | [°C] | -20 +70 | | | | | | | | | |
| Relative humidity | [%] | 5 95 | | | | | | | | | |
| Maximum setup altitude | [m] | 2000 | | | | | | | | | |
| Nominal operating altitude | | ≤ 2000 m above sea le | evel | | | | | | | | |
| Corrosion resistance class CRO | | 2 | | | | | | | | | |
| CE marking (see declaration o | f conformity) | To EU EMC Directive ²) | | | | | | | | | |
| | | According to EU RoHS Directive ²⁾ | | | | | | | | | |
| UKCA marking (see declaratio | n of | To UK EMC regulations | 3 ²⁾ | | | | | | | | |
| conformity) | | | | | | | | | | | |
| KC marking | | KC EMC | | | | | | | | | |
| Certification | | RCM | | | | | | | | | |
| Vibration resistant | | | · | 942017-4 and EN 60068-2-6 | | | | | | | |
| Shock resistance | | | ty level 2 to FN 942017-5 and | I EN 60068-2-27 | | | | | | | |
| Degree of protection | | IP65 | | | | | | | | | |
| Note on degree of protection | | In mounted state | | | | | | | | | |

¹⁾ More information www.festo.com/x/topic/crc


²⁾ For information about the area of use, see the EC declaration of conformity at: www.festo.com/catalogue/... d Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.


| Materials | |
|------------------------|----------------------------|
| Sub-base | Reinforced PA |
| Cover | Reinforced PA |
| Housing | Reinforced PA |
| Adjusting screw | Reinforced PA |
| Silencer | PP; PU foam |
| Seals | HNBR; NBR |
| 0-ring | HNBR; NBR |
| Clip | High-alloy stainless steel |
| Nut | High-alloy stainless steel |
| Screws | High-alloy stainless steel |
| Film | Polyester |
| Sleeve | Wrought aluminium alloy |
| Female nozzle | POM |
| Jet nozzle | Wrought aluminium alloy |
| Note on materials | RoHS-compliant |
| LABS (PWIS) conformity | VDMA24364-B1/B2-L |

Datasheet - Manifold sub-base for vacuum

Vacuum pu as a function of working pressure p1

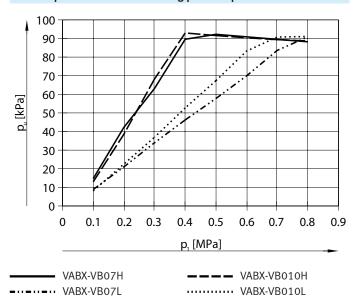


Suction volume flow qnS as a function of working pressure p1

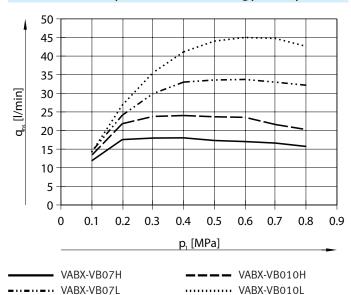


Evacuation time tevac as a function of vacuum pu at 0.6 bar operating pressure

Nominal width of Laval nozzle 0.7 mm

Nominal width of Laval nozzle 0.95 mm

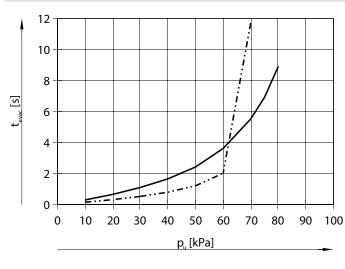


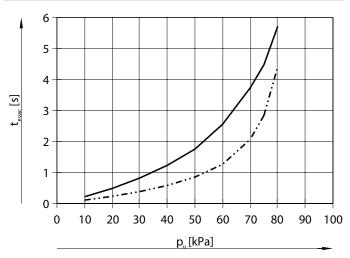

----- VABX-VB07H ----- VABX-VB07L •••••• VABX-VB010H
•••••• VABX-VB010L

Datasheet - Manifold sub-base for vacuum


Compressed air consumption qn as a function of working pressure p1

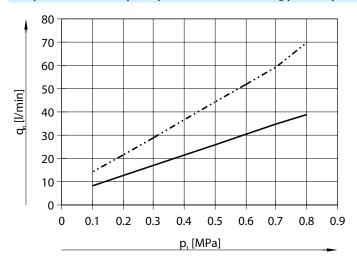


VABX-VB07

Sound pressure LpA as a function of working pressure p1, port 2 closed


Low suction volume flow

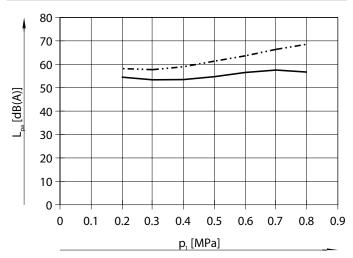




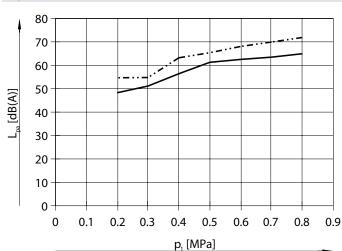

----- VABX-VB07L ----- VABX-VB010L ----- VABX-VB07H ----- VABX-VB010H

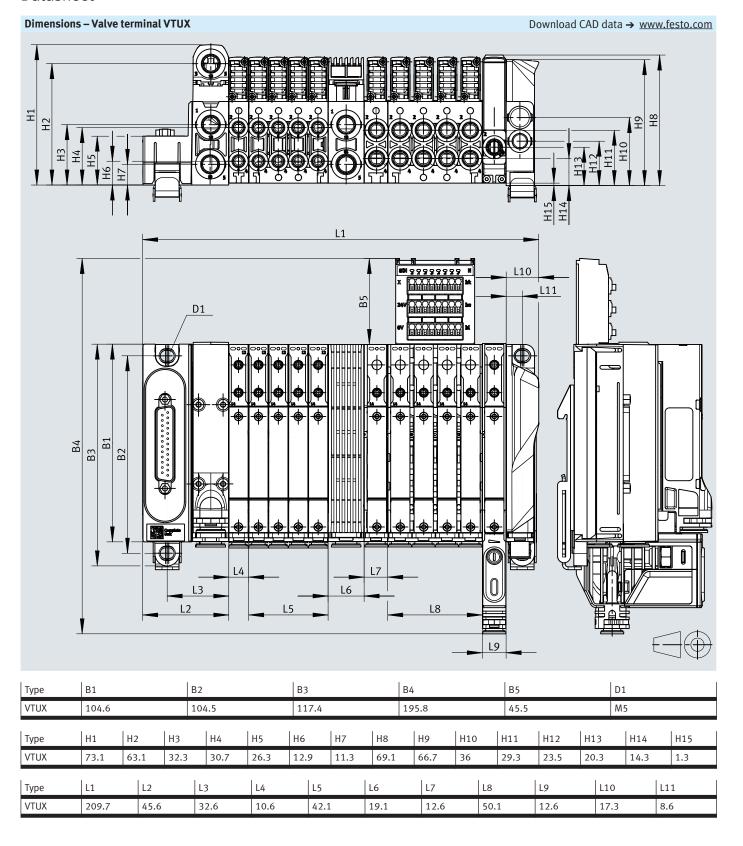

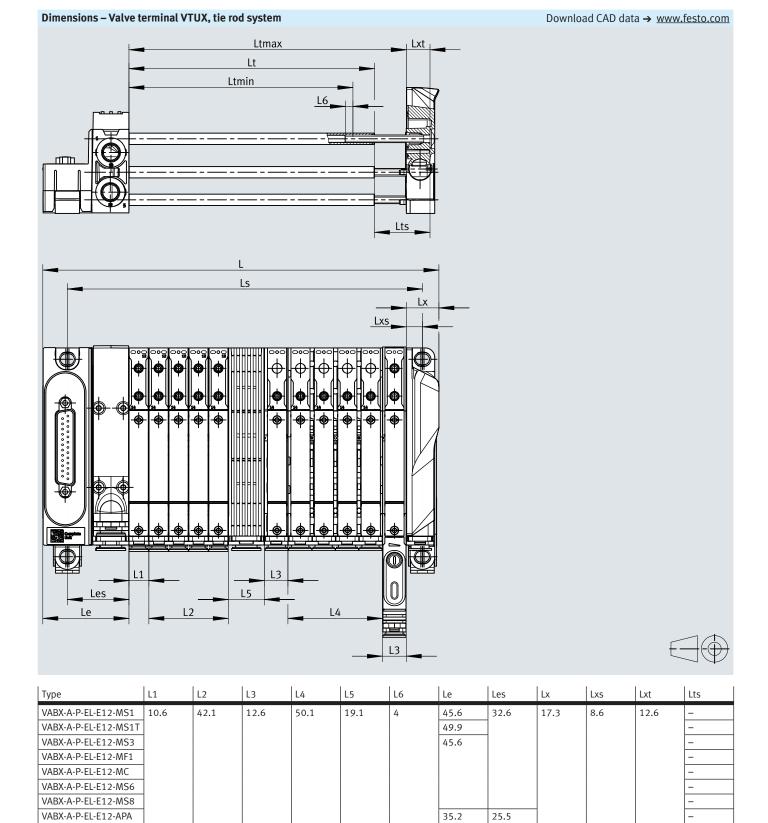

VABX-A-S-EL-E12-APA VABX-A-P-EL-E12-API

VABX-A-S-EL-E12-API VAME-XA-S-M4-30

VAME-XA-S-M4-45

45.6

32.6

30

45

Valve terminal VTUX

Datasheet


| Туре | L ₁) | Ls ¹⁾ |
|------|---|--|
| VTUX | Le + L8 + m x L1 + n x L2 + o x L5 + p x L3 + q x L4 + Lx | Les + m x L1 + n x L2 + o x L5 + p x L3 + q x L4 + Lxs |


- 1) m = Number of manifold sub-bases for one valve, size 1
 - n = Number of manifold sub-bases for four valves, size 1
 - o = Number of power supply modules
 - p = Number of manifold sub-bases for one valve, size 2/manifold sub-bases for vacuum
 - q = Number of manifold sub-bases for four valves, size 2
 - o, p, q = Number of manifold sub-bases/valve positions

| Туре | Ltmax ¹⁾ | Ltmin ¹⁾ | Ltol ¹⁾ |
|------|--|---|-------------------------------|
| VTUX | m x L1 + n x L2 + o x L5 + p x L3 + q x L4 | m x L1 + n x L2 + o x L5 + p x L3 + q x L4 + (Lxt - Lts) + 4 + Ltol | (m + n + o + p + q + 1) x 0.2 |

- 1) m = Number of manifold sub-bases for one valve, size 1
 - $n = \hbox{Number of manifold sub-bases for four valves, size 1}$
 - $o = Number\ of\ power\ supply\ modules$
 - $p = \hbox{Number of manifold sub-bases for one valve, size $2/$manifold sub-bases for vacuum}$
 - q = Number of manifold sub-bases for four valves, size 2
 - o, p, q = Number of manifold sub-bases/valve positions


$\label{eq:Dimensions-Left} \begin{tabular}{ll} \textbf{Dimensions-Left end plate, electrical connection for multi-pin plug connection, IP40} \end{tabular}$

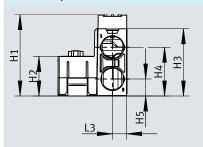

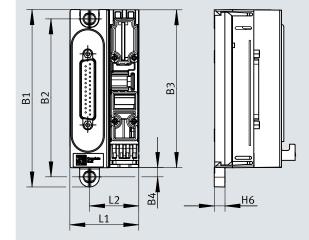





| Туре | B1 | B2 | В3 | B4 | H1 | H2 | H3 | H4 | H5 | Н6 | L1 | L2 | L3 |
|----------------|-------|-------|-------|-----|------|------|------|------|------|-----|------|------|-----|
| VABX-AP-EL-E12 | 117.4 | 104.5 | 104.3 | 6.2 | 53.9 | 26.2 | 44.5 | 32.3 | 11.3 | 7.1 | 45.6 | 32.6 | 9.5 |

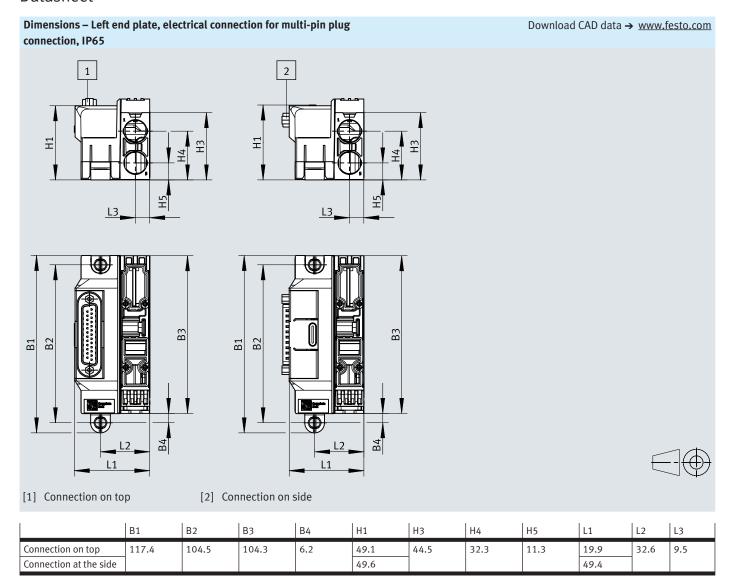

Dimensions – Left end plate, pneumatic interface for remote I/O system CPX-AP-A, with silencer

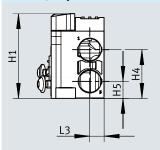


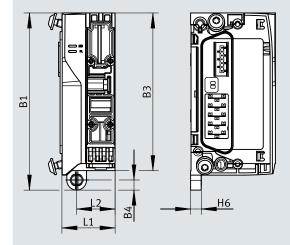




| Туре | B1 | В3 | B4 | H1 | H4 | H5 | H6 | L1 | L2 | L3 |
|---------------------|-------|-------|-----|------|------|------|-----|------|------|-----|
| VABX-A-P-EL-E12-APA | 117.2 | 104.3 | 6.7 | 56.1 | 32.3 | 11.3 | 7.1 | 35.2 | 25.5 | 9.5 |

Dimensions – Left end plate, pneumatic interface for remote I/O system CPX-AP-A, with ducted exhaust air

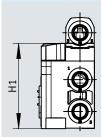


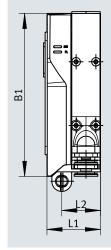




| Туре | B1 | H1 | L1 | L2 |
|---------------------|-------|------|------|------|
| VABX-A-P-EL-E12-APA | 107.3 | 56.1 | 35.2 | 25.5 |

Dimensions - Manifold sub-base for one valve

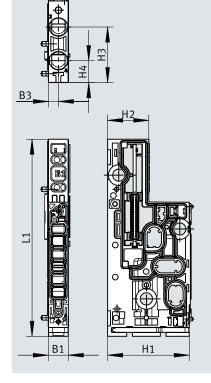




| Туре | B1 | В3 | H1 | H2 | Н3 | H4 | L1 |
|----------------|------|-----|------|------|------|------|-------|
| VABX-A-P-BV-AH | 10.6 | 5.3 | 43.2 | 21.8 | 29.4 | 11.6 | 104.3 |
| VABX-A-P-BV-BH | 12.6 | 6.3 | 43.2 | 21.8 | 28 | 13 | 104.3 |

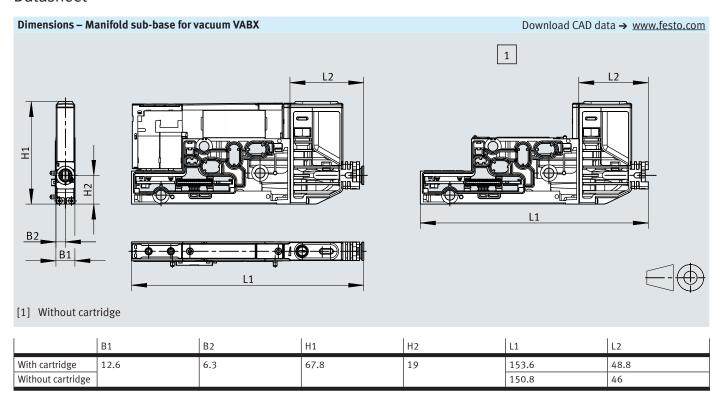


$\label{lem:decomposition} \textbf{Dimensions} - \textbf{Manifold sub-base for four valves, without connection} \\ \textbf{for input module}$

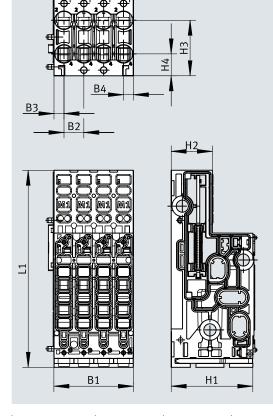




| Туре | B1 | B2 | В3 | B4 | H1 | H2 | H3 | H4 | L1 |
|----------------|------|------|-----|-----|------|------|------|------|-------|
| VABX-A-P-BV-AH | 42.1 | 10.5 | 5.3 | 5.3 | 43.2 | 21.8 | 29.4 | 11.6 | 104.3 |
| VABX-A-S-BV-AH | | | | | | | | | |
| VABX-A-P-BV-BH | 50.1 | 12.4 | 6.5 | 6.4 | 43.2 | 21.8 | 28 | 13 | 104.3 |
| VABX-A-S-BV-BH | | | | | | | | | |

$\label{lem:decomposition} \textbf{Dimensions} - \textbf{Manifold sub-base for four valves, with connection for input module}$

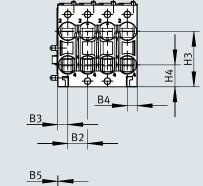

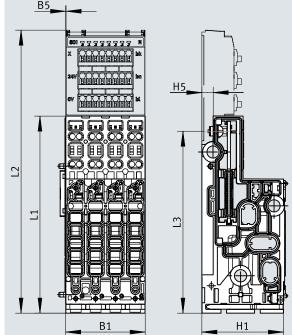




| Туре | B1 | B2 | B3 | B4 | H1 | H2 | H3 | H4 | H5 | L1 | L2 | L3 |
|----------------|------|------|-----|-----|-----|------|------|------|----|-------|-------|------|
| VABX-A-S-BV-AH | 42.1 | 10.5 | 5.3 | 5.3 | 0.2 | 43.2 | 29.4 | 11.6 | 6 | 104.3 | 149.8 | 96.3 |
| VABX-A-S-BV-BH | 50.1 | 12.4 | 6.5 | 6.4 | 4.2 | 43.2 | 28 | 13 | 6 | 104.3 | 149.8 | 96.3 |

Dimensions – Input module, electrical connection socket M8


Download CAD data → www.festo.com

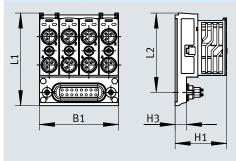



| Туре | B1 | H1 | H3 | L1 | L2 |
|------------------|------|------|----|----|----|
| VAEM-XA-E-8E-N-V | 41.8 | 27.2 | 6 | 49 | 42 |
| VAEM-XA-E-8E-P-V | | | | | |

Dimensions – Input module – Electrical connection spring-loaded terminal

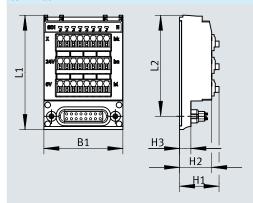



| Туре | B1 | H1 | H2 | Н3 | L1 | L2 |
|-------------------|------|------|----|----|------|------|
| VAEM-XA-E-8E-N-K2 | 41.8 | 20.9 | 17 | 6 | 60.5 | 53.5 |
| VAEM-XA-E-8E-P-K2 | | | | | | |

В1

19.1

Type

70

VABX-A-P-BU

VABX-A-S-BU

В2

9.6

Datasheet

Download CAD data > www.festo.com

H2

31

Н3

10


L1

104.3

H1

→Internet: www.festo.com/catalogue/...

43.2

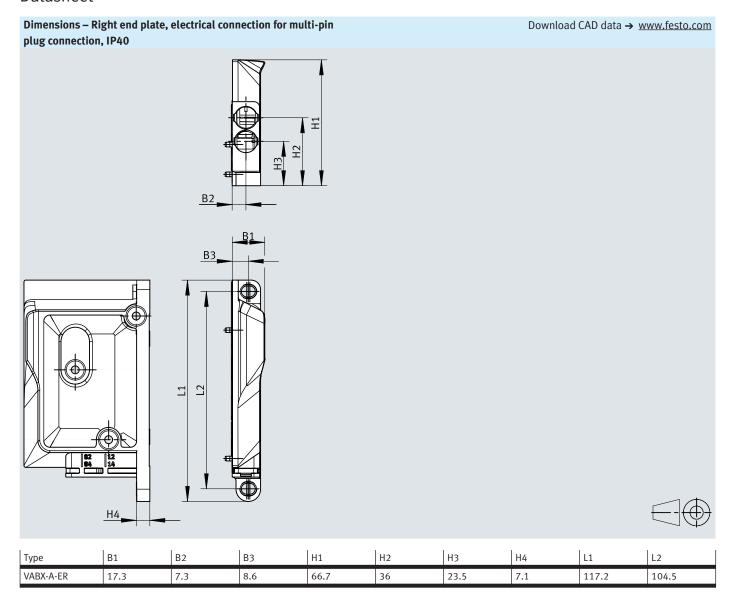

| Ordering data | | | | | | | | | |
|----------------------|----------------------------------|---|--|---------------------------|------------------------|----------------------------|--|--|--|
| | Code | Valve function | | | Part no. | Туре | | | |
| Individual solenoid | valve – Valve size 10 mm | | | | | | | | |
| | 5/2-way valve | | | | | | | | |
| | Position function 1-64: A | Single solenoid, mecha | 8187057 | VUVX-BK10-M52-MZH-F-1T1L | | | | | |
| | Position function 1-64: M | Single solenoid, pneum | 8187056 | VUVX-BK10-M52-A1ZH-F-1T1L | | | | | |
| | Position function 1-64: J | Double solenoid | | | 8187059 | VUVX-BK10-B52-ZH-F-1T1L | | | |
| A | 2x 3/2-way valve | | | | | | | | |
| | Position function 1-64: NS | Normally open, mechanical spring retur | 'n | | 8187063 | VUVX-BK10-T32U-MZH-F-1T1L | | | |
| | Position function 1-64: K | Normally closed, mechanical spring retur | 'n | | 8187061 | VUVX-BK10-T32C-MZH-F-1T1L | | | |
| | Position function 1-64: KC | Normally closed, pneumatic spring return | 1 | | 8187060 | VUVX-BK10-T32C-A1ZH-F-1T1L | | | |
| | 5/3-way valve | | | | | | | | |
| | Position function 1-64: G | Mid-position closed | | | 8187066 | VUVX-BK10-P53C-MZH-F-1T1L | | | |
| Vacant position – Va | lve size 10 mm | | | | | | | | |
| | Position function 1-64: L | Cover plate for one valv | e position | | 8163948 | VABB-XA-10-T | | | |
| Manifold sub-base - | - For one valve | Compatible with valve | Maximum number of | Size 1 | 8188458 | VABX-A-P-BV-AH-F | | | |
| | | terminal VTUX-A-P | solenoid coils 1 Maximum number of solenoid coils 2 | Size 2 | 8188462 | VABX-A-P-BV-BH-G | | | |
| | | | | Size 1 | 8188459 | VABX-A-P-BV-AH-A | | | |
| | | | | Size 2 | 8188463 | VABX-A-P-BV-BH-B | | | |
| Manifold sub-base | For four valves, without conne | estion for innut module | | | | | | | |
| mailiotu sub-base - | - For rour valves, without conne | Compatible with valve | Maximum number of | Size 1 | 8188460 | VABX-A-P-BV-AH-RVFFFF | | | |
| | _ | terminal VTUX-A-P | solenoid coils 4 Maximum number of solenoid coils 8 | Size 1 | | VABX-A-P-BV-BH-RVGGGG | | | |
| | | Compatible with valve | | Size 2 | 8188464 8188461 | VABX-A-P-BV-AH-RVAAAA | | | |
| | | | | Size 2 | 8188465 | VABX-A-P-BV-BH-RVBBBB | | | |
| | | | | Size 2 | 8188466 | VABX-A-S-BV-AH-RVAAAA | | | |
| | | terminal VTUX-A-S | solenoid coils 8 | Size 2 | 8188467 | VABX-A-S-BV-BH-RVBBBB | | | |
| | | | JIZE Z | 0100407 | VADA-A-3-DV-DII-KVDDDD | | | | |
| Manifold sub-base - | For four valves, with connection | <u> </u> | | | | | | | |
| | Sub-base block, additional | Compatible with valve | Maximum number of | Size 1 | 8196628 | VABX-A-S-BV-AH-RV0XJAAAA | | | |
| | function 1-64: 0XJ | terminal VTUX-A-S | solenoid coils 8 | Size 2 | 8196629 | VABX-A-S-BV-BH-RV0XJBBBB | | | |
| Manifold sub-base f | or vacuum | • | · | | | | | | |
| | VB | Compatible with valve terminal VTUX-A-P | Valve function 2x3/2- way, closed, single | Valve size | 8213837 | VABX-A-P-VE-VB010H | | | |
| | | Compatible with valve terminal VTUX-A-S | solenoid | | 8213836 | VABX-A-S-VE-VB010H | | | |

| Ordering data | | | | | | | |
|-------------------|----------------------------------|--|---------------------------|----------------|-----------|---------------|-----------------------|
| | Code | Description | | | Pack size | Part no. | Туре |
| Supply module | | | | | | | |
| | Connection position type 1-64: U | Manifold sub-base with ports for ducts 1 and 3/5, | nd 3/5, terminal VTUX-A-P | | - | 8191788 | VABX-A-P-BU-12-SHUH-U |
| | | no plate, no cartridge | | | _ | 8191789 | VABX-A-S-BU-12-SHUH-U |
| Plate | | | ' | | ' | | |
| T tate | Position function 1-64: UD | Plate for ducted exhaust ai | r without cartr | idge for moun | ting on | 8191794 | VABF-XA-12-M2-QX |
| | Position function 1-04. 0D | supply module | i, without carti | iage, for moun | ung on | 0171774 | VADI -AA-12-III2-QA |
| | Position function 1-64: US | Exhaust plate, for mounting on supply module | | | | 8191741 | VABF-XA-12-M1-C |
| Tie rods | | | | | | | |
| Tie ious | Tie rod: – | Threaded rod for tie rod, in | ternal hex. | 10 mm | 3 | 8191752 | VAME-XA-Z-10 |
| | | spanner size 4 | 12 mm | 3 | 8191753 | VAME-XA-Z-12 | |
| | | The threaded rod/screw co | 15 mm | 3 | 8191754 | VAME-XA-Z-16 | |
| | | selected based on the num | 17 mm | 3 | 8191755 | VAME-XA-Z-17 | |
| • | | of the individual sub-bases | i . | 19 mm | 3 | 8191756 | |
| | | | | 29 mm | 3 | 8191757 | VAME-XA-Z-29 |
| | | | | 38 mm | 3 | 8191758 | VAME-XA-Z-38 |
| | | | | 42 mm | 3 | 8191759 | VAME-XA-Z-38 |
| | | | | 50 mm | 3 | 8191760 | VAME-XA-Z-50 |
| | | | | | | | |
| | | | 61 mm | 3 | 8191761 | VAME-XA-Z-61 | |
| | | | | 84 mm | 3 | 8191762 | VAME-XA-Z-84 |
| | | | | 107 mm | 3 | 8191763 | VAME-XA-Z-107 |
| | | | | 130 mm | 3 | 8191764 | VAME-XA-Z-130 |
| | | | 150 mm | 3 | 8191765 | VAME-XA-Z-150 | |
| | | | | 170 mm | 3 | 8191766 | VAME-XA-Z-170 |
| | | | | 190 mm | 3 | 8191767 | VAME-XA-Z-190 |
| | _ | M4 screw with internal hex 2.5, for tie rod | , spanner size | 30 mm | 3 | 8191747 | VAME-XA-S-M4-30 |
| | | | | 45 mm | 3 | 8191748 | VAME-XA-S-M4-45 |
| Separator | | | | | | | |
| | | Separator for pressure zon | e separation in | duct 1 | 1 | 8191736 | VABD-XA-12-P1 |
| I | _ | Separator for pressure zon | e separation in | duct 3/5 | 2 | 8191737 | VABD-XA-12-P2 |
| Wall mounting | | | | | | | |
| | - | Mounting bracket Wall brackets should be mounted on the valve terminal every 20 cm. | | | 8191739 | VAME-XA-W | |
| DIN rail mounting | | | | | | | |
| | Mounting accessories: H | Clamp mounting for DIN rai | il mounting | | 2 | 8191782 | VAME-XA-H |

| Ordering data | Code | Description | | | Part no. | Туре |
|-----------------|--|---|---|---|----------|----------------------------------|
| Right end plate | | | | | | |
| | - | With mounting holes for wall mounting | | | 8191781 | VABX-A-ER-E12-JHTH-XR |
| eft end plate | | | | | | |
| | Electrical connection: | Electrical interface for multi-pin plug | Compatible with valve terminal | Sub-D, 25-pin, Maximum 24 valve coils | 8188447 | VABX-A-P-EL-E12-MS1-SHUH-XL |
| | Electrical connection: MS1T | connection, IP40 | VTUX-A-P | | 8206421 | VABX-A-P-EL-E12-MS1T-SHUH- XL |
| | Electrical connection: MS3 | | | Sub-D, 44-pin, Maximum 32 valve coils | 8188449 | VABX-A-P-EL-E12-MS3-SHUH-XI |
| | Electrical connection: MF1 | | | Ribbon cable, 26-pin, maximum 24 valve coils | 8188451 | VABX-A-P-EL-E12-MF1-SHUH-XI |
| | Electrical connection: MC | | | Terminal strip, 34-pin, maximum 32 valve coils | 8188452 | VABX-A-P-EL-E12-MC-SHUH-XL |
| | Electrical connection: MS6 | for multi-pin plug | Compatible with valve terminal | Sub-D, 25-pin, Maximum 24 valve coils | 8188448 | VABX-A-P-EL-E12-MS6-SHUH-XI |
| | Electrical connection: MF8 | connection, IP65 | VTUX-A-P | Sub-D, 44-pin, Maximum 32 valve coils | 8188450 | VABX-A-P-EL-E12-MS8-SHUH-XI |
| | Electrical connection: APA | Pneumatic interface for remote I/O system | Compatible with valve terminal VTUX-A-P | Maximum 32 valve coils | 8189594 | VABX-A-P-EL-E12-APA-SHUH-XL |
| | | CPX-AP-A, IP65 | Compatible with valve terminal VTUX-A-S | Maximum 128 valve coils | 8189595 | VABX-A-S-EL-E12-APA-SHUH-XL |
| | Electrical connection: API | Pneumatic interface for remote I/O system | Compatible with valve terminal VTUX-A-P | Maximum 32 valve coils | 8189592 | VABX-A-P-EL-E12-API-SHUH-XL |
| | | CPX-AP-I, IP65 | Compatible with valve terminal VTUX-A-S | Maximum 128 valve coils | 8189593 | VABX-A-S-EL-E12-API-SHUH-XL |
| | Electrical connection: | Node with IO- Link [®] , IP40 | Compatible with valve terminal VTUX-A-P | Push-in, maximum 32 valve coils | 8189591 | VABX-A-P-EL-E12-IOL-SHUH-XL |
| | Electrical connection: | Node with IO- Link [®] , IP65 | Compatible with valve terminal VTUX-A-P | M12, maximum 32 valve coils | 8189590 | VABX-A-P-EL-E12-IOS-SHUH-XL |
| nput module | | | | | | |
| | Sub-bases, block additional function 1-64: 04J | Electrical connectio terminal | n, spring-loaded | NPN (negative switching) | 8196630 | VAEM-XA-E-8E-N-K2 |
| | Sub-bases, block additional function 1-64: 03J | | | PNP (positive switching) | 8196631 | VAEM-XA-E-8E-P-K2 |
| | Sub-bases, block additional function 1-64: 02J | Electrical connection, socket M8 | | NPN (negative switching) | 8196632 | VAEM-XA-E-8E-N-V |
| | Sub-bases, block additional function 1-64: 01J | | | PNP (positive switching) | 8196633 | VAEM-XA-E-8E-P-V |

| Ordering data | | | | | | | |
|-------------------------|--|--|---|-------------|---------|-----------------------------|-----------------------------|
| | Code | Description | | | | Part no. | Туре |
| Connecting cable for i | nulti-pin plug cor | nection, Sub-D | | | | | |
| | _ | | raight, open cable end | IP65/IP67 | 2.5 m | 538225 | NEBV-S1G25-K-2.5-N-LE25 |
| | | 25-pin | | | 5 m | 538226 | NEBV-S1G25-K-5-N-LE25 |
| 56 | | | | | 10 m | 538227 | NEBV-S1G25-K-10-N-LE25 |
| | | IF | | IP40 | 2.5 m | 575417 | NEBV-S1G25-K-2.5-N-LE25-S6 |
| • | | | | | 5 m | 575418 | NEBV-S1G25-K-5-N-LE25-S6 |
| | | | | | 10 m | 575419 | NEBV-S1G25-K-10-N-LE25-S6 |
| | _ | Socket, 25-pin, an | Socket, 25-pin, angled, open cable end, | | | 575423 | NEBV-S1WA25-K-2.5-N-LE25-S9 |
| | | 25-pin | | | 5 m | 575424 | NEBV-S1WA25-K-5-N-LE25-S9 |
| | | | | | | 575425 | NEBV-S1WA25-K-10-N-LE25-S9 |
| Socket, 44-pin. ar | | igled, open cable end, | 1 | 2.5 m | 575420 | NEBV-S1WA44-K-2.5-N-LE44-S9 | |
| | | 44-pin | | | 5 m | 575421 | NEBV-S1WA44-K-5-N-LE44-S9 |
| | | | | | 10 m | 575422 | NEBV-S1WA44-K-10-N-LE44-S9 |
| | | | | | | | |
| Connecting cable – Ro | und plug | T | | | 1 | | 1 |
| | - | Straight plug, M8x1 A-coded to EN 61076- | | 3-pin | 0.5 m | 8078282 | NEBA-M8G3-U-0.5-N-M8G3 |
| | 2-104, straight socket, M8x1 A-coded to EN 61076-2-104 | | | | 1 m | 8078283 | NEBA-M8G3-U-1-N-M8G3 |
| | | | | 1.5 m | 8078284 | NEBA-M8G3-U-1.5-N-M8G3 | |
| | | | | | | 8078285 | NEBA-M8G3-U-2-N-M8G3 |
| | | | | | | 8078286 | NEBA-M8G3-U-2.5-N-M8G3 |
| | | | | | 5 m | 8078287 | NEBA-M8G3-U-5-N-M8G3 |
| | | | | | 10 m | 8078288 | NEBA-M8G3-U-10-N-M8G3 |
| | - | | Straight plug, M8x1, A-coded to | | | 8078270 | NEBA-LE3-U-2.5-N-M8G3 |
| | | EN 61076-2-104, | open end | | 5 m | 8078271 | NEBA-LE3-U-5-N-M8G3 |
| Straight plug, for IO-I | ink® | | | | | | |
| <u>Re</u> | _ | Straight plug, | Screw terminal | | | 8162296 | NECB-S-M12G5-C2 |
| | | M12x1, 5-pin, | | | | | |
| | | A-coded | | | | | |
| Connecting cable, for | IO-Link® | | | | | | |
| | _ | Suitable for | Straight – angled | | 5 m | 574321 | NEBU-M12G5-E-5-Q8N-M12G5 |
| | | energy chains | | 7.5 m | | 574322 | NEBU-M12G5-E-7.5-Q8N-M12G5 |
| | | , | | | 10 m | 574323 | NEBU-M12G5-E-10-Q8N-M12G5 |
| | Ŏ. | | | | | 374323 | MEDO MIZOS E 10 QON MIZOS |
| Distributor, for IO-Lin | k® | | | | | | |
| | _ | M12 T-adapter, 5- | M12 T-adapter, 5-pin | | | | FB-TA-M12-5POL |
| | _ | Y-distributor with | cable on controller side, <i>N</i> | M12x1 A-cod | ed | 8091516 | NEDU-L1R2-M12G5-M12LE-1R |

Valve terminal VTUX

| Ordering data | | | | | | | |
|--------------------|--------------------|--|-----------|--------------|-----------|-------------|----------------------|
| | Code | Description | | Weight | Pack size | Part no. | Туре |
| | | | | [g] | | | |
| Cartridge | | | | | | | |
| | _ | Cartridge 10 mm, | 4 mm | 0.9 | 10 | 8174164 | NPQX-D-PC10-Q4-P10 |
| | | connection for tubing O.D. | 6 mm | 0.72 | 10 | 8174165 | NPQX-D-PC10-Q6-P10 |
| | | | 1/8" | 2 | 10 | 8184511 | NPQX-D-PC10-T18-P10 |
| | | | 5/32" | 0.9 | 10 | 8184509 | NPQX-D-PC10-T532-P10 |
| | | | 1/4" | 2.15 | 10 | 8184510 | NPQX-D-PC10-T14-P10 |
| | | Cartridge 12 mm, | 4 mm | 1.24 | 10 | 8174166 | NPQX-D-PC12-Q4-P10 |
| | | connection for tubing O.D. | 6 mm | 1.2 | 10 | 8174167 | NPQX-D-PC12-Q6-P10 |
| | | | 8 mm | 0.92 | 10 | 8174168 | NPQX-D-PC12-Q8-P10 |
| | | | 5/32" | 1.24 | 10 | 8184512 | NPQX-D-PC12-T532-P10 |
| | | | 1/4" | 2.6 | 10 | 8184514 | NPQX-D-PC12-T14-P10 |
| | | | 5/16" | 0.92 | 10 | 8184513 | NPQX-D-PC12-T516-P10 |
| | | Cartridge 15 mm, | 8 mm | 1.9 | 10 | 8174169 | NPQX-D-PC15-Q8-P10 |
| | | connection for tubing O.D. | 10 mm | 1.64 | 10 | 8174170 | NPQX-D-PC15-Q10-P10 |
| | | | 12 mm | 7.6 | 10 | 8174171 | NPQX-D-PC19-Q12-P10 |
| | | | 5/16" | 1.9 | 10 | 8184515 | NPQX-D-PC15-T516-P10 |
| | | | 3/8" | 10 | 10 | 8189810 | NPQX-D-PC10-T38-P10 |
| 6" | | | | | | | |
| Silencer | T_ | Cilonor | | 0.7 | 1 | 0101740 | AMTY D DC42 |
| | - | Silencer | | 0.7 | 1 | 8191740 | AMTX-P-PC12 |
| <u> </u> | | | | | | | |
| Blanking plug | | | | | | | |
| | _ | Cartridge | | 1 | 10 | 8191749 | NPQX-P-PC10 |
| | | | 0.8 | 10 | 8191750 | NPQX-P-PC12 | |
| • | | | | 1.6 | 10 | 8191751 | NPQX-P-PC15 |
| | | | | | | | |
| Cover cap | T., | | | T | | | I |
| | Manual override: | Cover cap for manual override | | Concealed | 10 | 8198864 | VAMC-XA-CS |
| √ - | HV | _ | | D: | | 0400045 | WANG VA. CD |
| | Manual override: | | | Detenting | 10 | 8198865 | VAMC-XA-CD |
| Acr. | | | | | | | |
| | IP cover caps pre- | Cover cap for electrical connections M8. | x1 | | 8 | 8196625 | NEAU-AK-M8 |
| | assembled: | | | | | | |
| | AK | | | | | | |
| Inscription labels | | | | | | | |
| - A | _ | Inscription label for marking pressure | Duct 1 se | parated | 5 | 8191742 | ASLR-C-XA-TT |
| | | zone separation | | separated | 5 | 8191743 | ASLR-C-XA-TR |
| | | | | /5 separated | | 8191745 | ASLR-C-XA-TS |
| | | | | | | | |
| | - | Inscription label 6x12.5 mm for input m | odules | | 24 | 8087174 | ASLR-L-X4-612-P240 |
| | | | | | | | |
| A STATE | | | | | | | |
| * | | | | | | | |